



packetvideoTM

PV2Way Engine

Build Version: CORE_8.508.1.1

April 1, 2010

Contents

| | | |
|----------|--|----------|
| 1 | pv2way_engine Hierarchical Index | 1 |
| 1.1 | pv2way_engine Class Hierarchy | 1 |
| 2 | pv2way_engine Data Structure Index | 2 |
| 2.1 | pv2way_engine Data Structures | 2 |
| 3 | pv2way_engine File Index | 3 |
| 3.1 | pv2way_engine File List | 3 |
| 4 | pv2way_engine Data Structure Documentation | 4 |
| 4.1 | CPV2WayEngineFactory Class Reference | 4 |
| 4.2 | CPV2WayInterface Class Reference | 6 |
| 4.3 | CPV2WayProxyFactory Class Reference | 14 |
| 4.4 | CPVLogicalChannelIndication Class Reference | 15 |
| 4.5 | CPVUserInput Class Reference | 16 |
| 4.6 | CPVUserInputAlphanumeric Class Reference | 17 |
| 4.7 | CPVUserInputDtmf Class Reference | 19 |
| 4.8 | CPVVideoSpatialTemporalTradeoff Class Reference | 21 |
| 4.9 | H324MConfigInterface Class Reference | 22 |
| 4.10 | H324MConfigObserver Class Reference | 32 |
| 4.11 | H324MReverseParametersExtensionInterface Class Reference | 33 |
| 4.12 | PV2Way324ConnectOptions Class Reference | 34 |
| 4.13 | PV2Way324InitInfo Class Reference | 36 |
| 4.14 | PV2WayConnectOptions Class Reference | 38 |
| 4.15 | PV2WayInitInfo Class Reference | 40 |
| 4.16 | PV2WayTestExtensionInterface Class Reference | 42 |
| 4.17 | PVH223AI1Config Class Reference | 44 |
| 4.18 | PVH223AI2Config Class Reference | 45 |
| 4.19 | PVH223AI3Config Class Reference | 46 |

| | |
|---|-----------|
| 4.20 PVH223AIConfig Class Reference | 47 |
| 4.21 PVMFComponentInterface Class Reference | 48 |
| 5 pv2way_engine File Documentation | 49 |
| 5.1 pv_2way_basic_types.h File Reference | 49 |
| 5.2 pv_2way_engine_factory.h File Reference | 54 |
| 5.3 pv_2way_h324m_types.h File Reference | 55 |
| 5.4 pv_2way_interface.h File Reference | 57 |
| 5.5 pv_2way_proxy_factory.h File Reference | 58 |
| 5.6 pv_2way_test_extension_interface.h File Reference | 59 |
| 5.7 tsc_h324m_config_interface.h File Reference | 60 |

Chapter 1

pv2way_engine Hierarchical Index

1.1 pv2way_engine Class Hierarchy

This inheritance list is sorted roughly, but not completely, alphabetically:

| | |
|--|----|
| CPV2WayEngineFactory | 4 |
| CPV2WayInterface | 6 |
| CPV2WayProxyFactory | 14 |
| CPVLogicalChannelIndication | 15 |
| CPVUserInput | 16 |
| CPVUserInputAlphanumeric | 17 |
| CPVUserInputDtmf | 19 |
| CPVVideoSpatialTemporalTradeoff | 21 |
| H324MConfigInterface | 22 |
| H324MConfigObserver | 32 |
| H324MReverseParametersExtensionInterface | 33 |
| PV2WayConnectOptions | 38 |
| PV2Way324ConnectOptions | 34 |
| PV2WayInitInfo | 40 |
| PV2Way324InitInfo | 36 |
| PV2WayTestExtensionInterface | 42 |
| PVH223AIConfig | 47 |
| PVH223AI1Config | 44 |
| PVH223AI2Config | 45 |
| PVH223AI3Config | 46 |
| PVMFComponentInterface | 48 |

Chapter 2

pv2way_engine Data Structure Index

2.1 pv2way_engine Data Structures

Here are the data structures with brief descriptions:

| | |
|--|----|
| CPV2WayEngineFactory | 4 |
| CPV2WayInterface | 6 |
| CPV2WayProxyFactory | 14 |
| CPVLogicalChannelIndication | 15 |
| CPVUserInput | 16 |
| CPVUserInputAlphanumeric | 17 |
| CPVUserInputDtmf | 19 |
| CPVVideoSpatialTemporalTradeoff | 21 |
| H324MConfigInterface | 22 |
| H324MConfigObserver | 32 |
| H324MReverseParametersExtensionInterface | 33 |
| PV2Way324ConnectOptions | 34 |
| PV2Way324InitInfo | 36 |
| PV2WayConnectOptions | 38 |
| PV2WayInitInfo | 40 |
| PV2WayTestExtensionInterface | 42 |
| PVH223AI1Config | 44 |
| PVH223AI2Config | 45 |
| PVH223AI3Config | 46 |
| PVH223AIConfig | 47 |
| PVMFComponentInterface | 48 |

Chapter 3

pv2way_engine File Index

3.1 pv2way_engine File List

Here is a list of all files with brief descriptions:

| | |
|--|----|
| pv_2way_basic_types.h | 49 |
| pv_2way_engine_factory.h | 54 |
| pv_2way_h324m_types.h | 55 |
| pv_2way_interface.h | 57 |
| pv_2way_proxy_factory.h | 58 |
| pv_2way_test_extension_interface.h | 59 |
| tsc_h324m_config_interface.h | 60 |

Chapter 4

pv2way_engine Data Structure Documentation

4.1 CPV2WayEngineFactory Class Reference

```
#include <pv_2way_engine_factory.h>
```

Static Public Methods

- OSCL_IMPORT_REF void `Init ()`
- OSCL_IMPORT_REF void `Cleanup ()`
- OSCL_IMPORT_REF `CPV2WayInterface * CreateTerminal (PV2WayTerminalType aTerminalType, PVCommandStatusObserver *aCmdStatusObserver, PVInformationalEventObserver *aInfoEventObserver, PVErErrorEventObserver *aErrorEventObserver)`
- OSCL_IMPORT_REF void `DeleteTerminal (CPV2WayInterface *terminal)`

4.1.1 Member Function Documentation

4.1.1.1 OSCL_IMPORT_REF void `CPV2WayEngineFactory::Cleanup () [static]`

4.1.1.2 OSCL_IMPORT_REF `CPV2WayInterface* CPV2WayEngineFactory::CreateTerminal (PV2WayTerminalType aTerminalType, PVCommandStatusObserver *aCmdStatusObserver, PVInformationalEventObserver *aInfoEventObserver, PVErErrorEventObserver *aErrorEventObserver) [static]`

Creates an instance of a terminal of a particular type. Initially, this will support 324m type terminals.

Parameters:

- `aTerminalType` the type of terminal to be created.
- `aCmdStatusObserver` the observer for command status
- `aInfoEventObserver` the observer for unsolicited informational events
- `aErrorEventObserver` the observer for unsolicited error events

Returns:

A pointer to a terminal or leaves if the type is invalid or the system is out of resources

**4.1.1.3 OSCL_IMPORT_REF void CPV2WayEngineFactory::DeleteTerminal
(CPV2WayInterface * *terminal*) [static]**

This function allows the application to delete an instance of a terminal and reclaim all allocated resources. A terminal should be deleted only in the EIdle state. An attempt to delete a terminal in any other state will result in unpredictable behavior.

Parameters:

terminal the terminal to be deleted.

4.1.1.4 OSCL_IMPORT_REF void CPV2WayEngineFactory::Init () [static]

The documentation for this class was generated from the following file:

- [pv_2way_engine_factory.h](#)

4.2 CPV2WayInterface Class Reference

```
#include <pv_2way_interface.h>
```

Public Methods

- virtual ~CPV2WayInterface ()
- virtual OSCL_IMPORT_REF PVCommandId [GetSDKInfo](#) (PVSDKInfo &aSDKInfo, OsclAny *aContextData=NULL)=0
- virtual OSCL_IMPORT_REF PVCommandId [GetSDKModuleInfo](#) (PVSDKModuleInfo &aSDKModuleInfo, OsclAny *aContextData=NULL)=0
- virtual OSCL_IMPORT_REF PVCommandId [Init](#) ([PV2WayInitInfo](#) &aInitInfo, OsclAny *aContextData=NULL)=0
- virtual OSCL_IMPORT_REF PVCommandId [Reset](#) (OsclAny *aContextData=NULL)=0
- virtual OSCL_IMPORT_REF PVCommandId [AddDataSource](#) ([PVTrackId](#) aTrackId, PVMFNodeInterface &aDataSource, OsclAny *aContextData=NULL)=0
- virtual OSCL_IMPORT_REF PVCommandId [RemoveDataSource](#) (PVMFNodeInterface &aDataSource, OsclAny *aContextData=NULL)=0
- virtual OSCL_IMPORT_REF PVCommandId [AddDataSink](#) ([PVTrackId](#) aTrackId, PVMFNodeInterface &aDataSink, OsclAny *aContextData=NULL)=0
- virtual OSCL_IMPORT_REF PVCommandId [RemoveDataSink](#) (PVMFNodeInterface &aDataSink, OsclAny *aContextData=NULL)=0
- virtual OSCL_IMPORT_REF PVCommandId [Connect](#) (const [PV2WayConnectOptions](#) &aOptions, PVMFNodeInterface *aCommServer=NULL, OsclAny *aContextData=NULL)=0
- virtual OSCL_IMPORT_REF PVCommandId [Disconnect](#) (OsclAny *aContextData=NULL)=0
- virtual OSCL_IMPORT_REF PVCommandId [GetState](#) ([PV2WayState](#) &aState, OsclAny *aContextData=NULL)=0
- virtual OSCL_IMPORT_REF PVCommandId [Pause](#) ([PV2WayDirection](#) aDirection, [PVTrackId](#) aTrackId, OsclAny *aContextData=NULL)=0
- virtual OSCL_IMPORT_REF PVCommandId [Resume](#) ([PV2WayDirection](#) aDirection, [PVTrackId](#) aTrackId, OsclAny *aContextData=NULL)=0
- virtual OSCL_IMPORT_REF PVCommandId [SetLogAppender](#) (const char *aTag, OsclSharedPtr< PVLoggerAppender > &aAppender, OsclAny *aContextData=NULL)=0
- virtual OSCL_IMPORT_REF PVCommandId [RemoveLogAppender](#) (const char *aTag, OsclSharedPtr< PVLoggerAppender > &aAppender, OsclAny *aContextData=NULL)=0
- virtual OSCL_IMPORT_REF PVCommandId [SetLogLevel](#) (const char *aTag, int32 aLevel, bool aSetSubtree=false, OsclAny *aContextData=NULL)=0
- virtual OSCL_IMPORT_REF PVCommandId [GetLogLevel](#) (const char *aTag, int32 &aLogInfo, OsclAny *aContextData=NULL)=0
- virtual OSCL_IMPORT_REF PVCommandId [QueryInterface](#) (const PVUuid &aUuid, PVInterface *&aInterfacePtr, OsclAny *aContext=NULL)=0
- virtual OSCL_IMPORT_REF PVCommandId [CancelAllCommands](#) (OsclAny *aContextData=NULL)=0

4.2.1 Detailed Description

CPV2WayInterface Class

CPV2WayInterface is the interface to the pv2way SDK, which allows initialization, control, and termination of a two-way (3g-324m, SIP) terminal. The application is expected to contain and maintain a pointer to the CPV2WayInterface instance at all times that a call is active. The CPV2WayFactory factory class is to be used to create and delete instances of this class

4.2.2 Constructor & Destructor Documentation

4.2.2.1 virtual CPV2WayInterface::~CPV2WayInterface () [inline, virtual]

Object destructor function Releases Resources prior to destruction

4.2.3 Member Function Documentation

4.2.3.1 virtual OSCL_IMPORT_REF PVCommandId CPV2WayInterface::AddDataSink (**PVTrackId** *aTrackId*, PVMFNodeInterface & *aDataSink*, OsclAny * *aContextData* = NULL) [pure virtual]

This function allows the user to specify the media sink for an incoming track. AddDataSinkL can be called only for established incoming tracks identified by a unique track id. Incoming tracks are initiated by the peer and their establishment is indicated using the PVT_INDICATION_INCOMING_TRACK notification which provides the media type and a unique track id. The format type is indicated using the PV2WayTrackInfoInterface extension interface in the PVAsyncInformationalEvent. Data sinks could be of the following types: a)raw media sinks like video display sinks for RGB and YUV formats, audio rendering sinks for PCM. b)sources of compressed data like file, combined decode and render devices.

Parameters:

aTrackId Indicates the unique track id to be associated with this sink.

aDataSink The data sink to be added

aContextData Optional opaque data that will be passed back to the user with the command response

Returns:

A unique command id for asynchronous completion

4.2.3.2 virtual OSCL_IMPORT_REF PVCommandId CPV2WayInterface::AddDataSource (**PVTrackId** *aTrackId*, PVMFNodeInterface & *aDataSource*, OsclAny * *aContextData* = NULL) [pure virtual]

This function allows the user to specify the media source for an outgoing track. Sources should be added after the PVT_INDICATION_OUTGOING_TRACK is received which specifies the format type and the unique track id. The format type is indicated using the PV2WayTrackInfoInterface extension interface in the PVAsyncInformationalEvent. Data sources could be of the following types: a)raw media sources like camera, microphone etc. b)sources of compressed data like file, combined capture and encode devices.

Parameters:

aTrackId The outgoing track id

aDataSource Reference to the data source for this track

aContextData Optional opaque data that will be passed back to the user with the command response
 @leave This method can leave with one of the following error codes PVMFErrNotSupported if the format of the sources/sinks is incomptible with what the SDK can handle KPVErrInvalidState if invoked in the incorrect state KErrNoMemory if the SDK failed to allocate memory during this operation

Returns:

A unique command id for asynchronous completion

4.2.3.3 virtual OSCL_IMPORT_REF PVCommandId CPV2WayInterface::CancelAllCommands (OsclAny * *aContextData* = NULL) [pure virtual]

This API is to allow the user to cancel all pending requests. The current request being processed, if any, will also be aborted.

Parameters:

aContextData Optional opaque data that will be passed back to the user with the command response

Returns:

A unique command id for asynchronous completion

4.2.3.4 virtual OSCL_IMPORT_REF PVCommandId CPV2WayInterface::Connect (const PV2WayConnectOptions & *aOptions*, PVMFNodeInterface * *aCommServer* = NULL, OsclAny * *aContextData* = NULL) [pure virtual]

This function can be invoked only in the ESetup state. The terminal starts connecting with the remote terminal based on the specified options and capabilities. Incoming tracks may be opened before ConnectL completes and will be indicated via the PVT_INDICATION_INCOMING_TRACK event.

Parameters:

aOptions Optional additional information for call setup.

aCommServer An optional pointer to a comm server to provide comm source and sink end-points.

aContextData Optional opaque data that will be passed back to the user with the command response

Returns:

A unique command id for asynchronous completion

4.2.3.5 virtual OSCL_IMPORT_REF PVCommandId CPV2WayInterface::Disconnect (OsclAny * *aContextData* = NULL) [pure virtual]

The Disconnect call is valid only when invoked in the EConnecting, and EConnected states. It causes the terminal to transition to the EDisconnecting state. All the media tracks both incoming and outgoing will be closed on invoking Disconnect. On completion, the terminal goes to the ESetup state. The statistics of the previous call shall still be available until Connect is invoked again.

It is a no-op when called in any other state.

The post disconnect option specifies what this terminal wishes to do after the data call is terminated, whether it wants to disconnect the line or continue the call as a voice only call.

This is an asynchronous request.

Parameters:

aContextData Optional opaque data that will be passed back to the user with the command response

Returns:

A unique command id for asynchronous completion

4.2.3.6 virtual OSCL_IMPORT_REF PVCommandId CPV2WayInterface::GetLogLevel (const char * *aTag*, int32 & *aLogInfo*, OsclAny * *aContextData* = NULL) [pure virtual]

Allows the logging level to be queried for a particular logging tag. A larger log level will result in more messages being logged.

In the asynchronous response, this should return the log level along with an indication of where the level was inherited (i.e., the ancestor tag).

Parameters:

aTag Specifies the logger tree tag where the log level should be retrieved.

aLogInfo an output parameter which will be filled in with the log level information.

aContextData Optional opaque data that will be passed back to the user with the command response

Exceptions:

memory_error leaves on memory allocation error.

Returns:

A unique command id for asynchronous completion

4.2.3.7 virtual OSCL_IMPORT_REF PVCommandId CPV2WayInterface::GetSDKInfo (PVSDKInfo & *aSDKInfo*, OsclAny * *aContextData* = NULL) [pure virtual]

Returns version information about the SDK

Parameters:

aSDKInfo A reference to a PVSDKInfo structure which contains the product label and date

aContextData Optional opaque data that will be passed back to the user with the command response
 @leave This method can leave with one of the following error codes PVMFErrNoMemory if the SDK failed to allocate memory during this operation

Returns:

A unique command id for asynchronous completion

4.2.3.8 virtual OSCL_IMPORT_REF PVCommandId CPV2WayInterface::GetSDKModuleInfo (PVSDKModuleInfo & *aSDKModuleInfo*, OsclAny * *aContextData* = NULL) [pure virtual]

Returns information about all modules currently used by the SDK.

Parameters:

aSDKModuleInfo A reference to a PVSDKModuleInfo structure which contains the number of modules currently used by pv2way SDK and the PV UID and description string for each module. The PV UID and description string for modules will be returned in one string buffer allocated by the client. If the string buffer is not large enough to hold the all the module's information, the information will be written up to the length of the buffer and truncated.

aContextData Optional opaque data that will be passed back to the user with the command response
 @leave This method can leave with one of the following error codes PVMFErrNoMemory if the SDK failed to allocate memory during this operation

Returns:

A unique command id for asynchronous completion

**4.2.3.9 virtual OSCL_IMPORT_REF PVCommandId CPV2WayInterface::GetState
 (**PV2WayState** & *aState*, OsclAny * *aContextData* = NULL) [pure virtual]**

This function returns the current state of the pv2way. Application may use this info for updating display or determine if the pv2way is ready for the next request.

Parameters:

aState Reflects the state of the PV 2Way engine when the command was received.

aContextData Optional opaque data that will be passed back to the user with the command response

Returns:

value indicating the current pv2way state

**4.2.3.10 virtual OSCL_IMPORT_REF PVCommandId CPV2WayInterface::Init
 (**PV2WayInitInfo** & *aInitInfo*, OsclAny * *aContextData* = NULL) [pure virtual]**

This function is valid only in the EIdle state. It is a no-op when invoked in any other state. It causes the pv2way to transition to the ESetup state. The terminal remains in the EInitializing state during the transition.

While initializing, the pv2way tries to allocate system resources needed for a two-way call. If it fails for some reason, and the pv2way reverts to the EIdle state. All the resources are de-allocated.

Parameters:

aInitInfo A reference to a CPV2WayInitInfo structure which contains the capabilities of the applications sinks and sources to handle compressed and uncompressed formats.

aContextData Optional opaque data that will be passed back to the user with the command response
 @leave This method can leave with one of the following error codes PVMFErrArgument if more tx and rx codecs are set than engine can handle, or the mandatory codecs are not in the list. PVMFErrNotSupported if the format of the sources/sinks is incompatible with what the SDK can handle PVMFErrInvalidState if invoked in the incorrect state PVMFErrNoMemory if the SDK failed to allocate memory during this operation

Returns:

A unique command id for asynchronous completion

**4.2.3.11 virtual OSCL_IMPORT_REF PVCommandId CPV2WayInterface::Pause
 (**PV2WayDirection** *aDirection*, **PVTrackId** *aTrackId*, OsclAny * *aContextData* = NULL)
 [pure virtual]**

For an incoming track this function pauses sending media to the sink (output device) and stops the sink.

For outgoing, it pauses the sending of media from the source and stops the source.

Parameters:

aDirection Specifies the direction of the track - incoming or outgoing

aTrackId Specifies which track is to be paused.

aContextData Optional opaque data that will be passed back to the user with the command response

Returns:

A unique command id for asynchronous completion

**4.2.3.12 virtual OSCL_IMPORT_REF PVCommandId CPV2WayInterface::QueryInterface
(const PVUuid & *aUuid*, PVInterface *& *aInterfacePtr*, OsclAny * *aContext* = NULL)
[pure virtual]**

This API is to allow for extensibility of the pv2way interface. It allows a caller to ask for an instance of a particular interface object to be returned. The mechanism is analogous to the COM IUnknown method. The interfaces are identified with an interface ID that is a UUID as in DCE and a pointer to the interface object is returned if it is supported. Otherwise the returned pointer is NULL. TBD: Define the UIID, InterfacePtr structures

Parameters:

aUuid The UUID of the desired interface
aInterfacePtr The output pointer to the desired interface

Exceptions:

not_supported leaves if the specified interface id is not supported.

**4.2.3.13 virtual OSCL_IMPORT_REF PVCommandId CPV2WayInterface::RemoveDataSink
(PVMFNodeInterface & *aDataSink*, OsclAny * *aContextData* = NULL) [pure
virtual]**

This function unbinds a previously added sink.

Parameters:

aDataSink pointer to the media sink node
aContextData Optional opaque data that will be passed back to the user with the command response

Returns:

A unique command id for asynchronous completion

**4.2.3.14 virtual OSCL_IMPORT_REF PVCommandId CPV2WayInterface::RemoveDataSource
(PVMFNodeInterface & *aDataSource*, OsclAny * *aContextData* = NULL) [pure
virtual]**

This function unbinds a previously added source.

Parameters:

aDataSource pointer to the media source node
aContextData Optional opaque data that will be passed back to the user with the command response

Returns:

A unique command id for asynchronous completion

**4.2.3.15 virtual OSCL_IMPORT_REF PVCommandId CPV2WayInterface::RemoveLog-
Appender (const char * *aTag*, OsclSharedPtr< PVLoggerAppender > & *aAppender*,
OsclAny * *aContextData* = NULL) [pure virtual]**

Allows a logging appender to be removed from the logger tree at the point specified by the input tag. The input tag cannot be NULL.

Parameters:

aTag Specifies the logger tree tag where the appender should be removed.

aAppender The log appender to remove. Must be a reference to the same object that was set.

aContextData Optional opaque data that will be passed back to the user with the command response

Exceptions:

memory_error leaves on memory allocation error.

Returns:

A unique command id for asynchronous completion

**4.2.3.16 virtual OSCL_IMPORT_REF PVCommandId CPV2WayInterface::Reset (OsclAny *
aContextData = NULL) [pure virtual]**

This function is valid only in the ESetup and EInitializing state. It is a no-op when invoked in the EIdle state and returns PVMFErrInvalidState if invoked in any other state.

It causes the pv2way to transition back to the EIdle state. The terminal remains in the EResetting state during the transition.

While resetting, the pv2way de-allocates all resources resources that had been previously allocated. When it completes, ResetComplete is called and the pv2way reverts to the EIdle state.

Parameters:

aContextData Optional opaque data that will be passed back to the user with the command response
@leave This method can leave with one of the following error codes PVMFErrInvalidState if invoked in the incorrect state PVMFErrNoMemory if the SDK failed to allocate memory during this operation

Returns:

A unique command id for asynchronous completion

**4.2.3.17 virtual OSCL_IMPORT_REF PVCommandId CPV2WayInterface::Resume
(PV2WayDirection *aDirection*, PVTrackId *aTrackId*, OsclAny * *aContextData* = NULL)
[pure virtual]**

Resume a previously paused incoming or outgoing track. For incoming, this function starts resumes playing out the media to the appropriate sink based on the current settings. For outgoing it resumes encoding and sending media from the source.

Parameters:

aDirection Specifies the direction of the track - incoming or outgoing

aTrackId Specifies which track is to be paused.

aContextData Optional opaque data that will be passed back to the user with the command response

Returns:

A unique command id for asynchronous completion

**4.2.3.18 virtual OSCL_IMPORT_REF PVCommandId CPV2WayInterface::SetLogAppender
 (const char * *aTag*, OsclSharedPtr< PVLoggerAppender > & *aAppender*, OsclAny *
aContextData = NULL) [pure virtual]**

Allows a logging appender to be attached at some point in the logger tag tree. The location in the tag tree is specified by the input tag string. A single appender can be attached multiple times in the tree, but it may result in duplicate copies of log messages if the appender is not attached in disjoint portions of the tree. A logging appender is responsible for actually writing the log message to its final location (e.g., memory, file, network, etc). This API can be called anytime after creation of the terminal.

Parameters:

aTag Specifies the logger tree tag where the appender should be attached.

aAppender The log appender to attach.

aContextData Optional opaque data that will be passed back to the user with the command response

Exceptions:

memory_error leaves on memory allocation error.

Returns:

A unique command id for asynchronous completion

**4.2.3.19 virtual OSCL_IMPORT_REF PVCommandId CPV2WayInterface::SetLogLevel (const
 char * *aTag*, int32 *aLevel*, bool *aSetSubtree* = false, OsclAny * *aContextData* = NULL)
 [pure virtual]**

Allows the logging level to be set for the logging node specified by the tag. A larger log level will result in more messages being logged. A message will only be logged if its level is LESS THAN or equal to the current log level. The set_subtree flag will allow an entire subtree, with the specified tag as the root, to be reset to the specified value.

Parameters:

aTag Specifies the logger tree tag where the log level should be set.

aLevel Specifies the log level to set.

aSetSubtree Specifies whether the entire subtree with aTag as the root should be reset to the log level.

aContextData Optional opaque data that will be passed back to the user with the command response

Exceptions:

memory_error leaves on memory allocation error.

Returns:

A unique command id for asynchronous completion

The documentation for this class was generated from the following file:

- [pv_2way_interface.h](#)

4.3 CPV2WayProxyFactory Class Reference

```
#include <pv_2way_proxy_factory.h>
```

Static Public Methods

- OSCL_IMPORT_REF void [Init \(\)](#)
- OSCL_IMPORT_REF void [Cleanup \(\)](#)
- OSCL_IMPORT_REF [CPV2WayInterface * CreateTerminal \(TPVTerminalType aTerminalType, PVCommandStatusObserver *aCmdStatusObserver, PVInformationalEventObserver *aInfoEventObserver, PVErrorEventObserver *aErrorEventObserver\)](#)
- OSCL_IMPORT_REF void [DeleteTerminal \(CPV2WayInterface *terminal\)](#)

4.3.1 Member Function Documentation

4.3.1.1 OSCL_IMPORT_REF void CPV2WayProxyFactory::Cleanup () [static]

4.3.1.2 OSCL_IMPORT_REF CPV2WayInterface* CPV2WayProxyFactory::CreateTerminal (TPVTerminalType aTerminalType, PVCommandStatusObserver *aCmdStatusObserver, PVInformationalEventObserver *aInfoEventObserver, PVErrorEventObserver *aErrorEventObserver) [static]

Creates an instance of a terminal of a particular type. Initially, this will support 324m type terminals.

Parameters:

- aTerminalType* the type of terminal to be created.
aCmdStatusObserver the observer for command status
aInfoEventObserver the observer for unsolicited informational events
aErrorEventObserver the observer for unsolicited error events

Returns:

A pointer to a terminal or leaves if the type is invalid or the system is out of resources

4.3.1.3 OSCL_IMPORT_REF void CPV2WayProxyFactory::DeleteTerminal (CPV2WayInterface * terminal) [static]

This function allows the application to delete an instance of a terminal and reclaim all allocated resources. A terminal should be deleted only in the EIdle state. An attempt to delete a terminal in any other state will result in unpredictable behavior.

Parameters:

- terminal* the terminal to be deleted.

4.3.1.4 OSCL_IMPORT_REF void CPV2WayProxyFactory::Init () [static]

The documentation for this class was generated from the following file:

- [pv_2way_proxy_factory.h](#)

4.4 CPVLogicalChannelIndication Class Reference

```
#include <pv_2way_h324m_types.h>
```

Public Methods

- OSCL_IMPORT_REF CPVLogicalChannelIndication (TPVChannelId channelId)
- OSCL_IMPORT_REF ~CPVLogicalChannelIndication ()
- OSCL_IMPORT_REF TPVChannelId GetChannelId ()
- OSCL_IMPORT_REF void addRef ()
- OSCL_IMPORT_REF void removeRef ()

4.4.1 Constructor & Destructor Documentation

4.4.1.1 OSCL_IMPORT_REF CPVLogicalChannelIndication::CPVLogicalChannelIndication
(TPVChannelId *channelId*)

4.4.1.2 OSCL_IMPORT_REF CPVLogicalChannelIndication::~CPVLogicalChannelIndication
()

4.4.2 Member Function Documentation

4.4.2.1 OSCL_IMPORT_REF void CPVLogicalChannelIndication::addRef ()

4.4.2.2 OSCL_IMPORT_REF TPVChannelId CPVLogicalChannelIndication::GetChannelId ()

4.4.2.3 OSCL_IMPORT_REF void CPVLogicalChannelIndication::removeRef ()


The documentation for this class was generated from the following file:

- [pv_2way_h324m_types.h](#)

4.5 CPVUserInput Class Reference

```
#include <pv_2way_h324m_types.h>
```

Inheritance diagram for CPVUserInput::

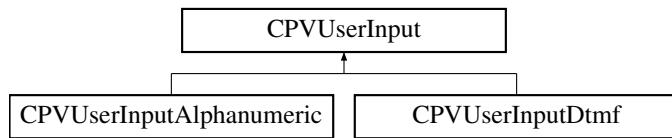

Public Methods

- OSCL_IMPORT_REF CPVUserInput()
- virtual ~CPVUserInput()
- virtual PV2WayUserInputType GetType()=0
- void addRef()
- void removeRef()

4.5.1 Detailed Description

CPVUserInput class Base class for User Input messages

4.5.2 Constructor & Destructor Documentation

4.5.2.1 OSCL_IMPORT_REF CPVUserInput::CPVUserInput()

Constructor of CPVUserInputDtmf class.

4.5.2.2 virtual CPVUserInput::~CPVUserInput() [inline, virtual]

Virtual destructor

4.5.3 Member Function Documentation

4.5.3.1 void CPVUserInput::addRef() [inline]

4.5.3.2 virtual PV2WayUserInputType CPVUserInput::GetType() [pure virtual]

Virtual function to return the user input type

Implemented in CPVUserInputDtmf, and CPVUserInputAlphanumeric.

4.5.3.3 void CPVUserInput::removeRef() [inline]


The documentation for this class was generated from the following file:

- [pv_2way_h324m_types.h](#)

4.6 CPVUserInputAlphanumeric Class Reference

```
#include <pv_2way_h324m_types.h>
```

Inheritance diagram for CPVUserInputAlphanumeric::

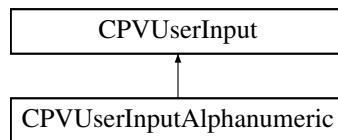

Public Methods

- OSCL_IMPORT_REF CPVUserInputAlphanumeric (uint8 *apInput, uint16 aLen)
- OSCL_IMPORT_REF ~CPVUserInputAlphanumeric ()
- OSCL_IMPORT_REF PV2WayUserInputType GetType ()
- OSCL_IMPORT_REF uint8 * GetInput ()
- OSCL_IMPORT_REF uint16 GetLength ()

Protected Attributes

- uint8 * ipInput
- uint16 iLength

4.6.1 Detailed Description

CPVUserInputAlphanumeric Class

CPVUserInputAlphanumeric class contains an alphanumeric string from an H.245 UserInputIndication message.

4.6.2 Constructor & Destructor Documentation

4.6.2.1 OSCL_IMPORT_REF CPVUserInputAlphanumeric::CPVUserInputAlphanumeric (uint8 * *apInput*, uint16 *aLen*)

Constructor of CPVUserInputAlphanumeric class.

Parameters:

- apInput* The input alphanumeric string (T.50 encoded).
aLen The lenght of alphanumeric string in bytes

Returns:

none @leave This method can leave with one of the following error codes OsclErrGeneral memory copy failed

4.6.2.2 OSCL_IMPORT_REF CPVUserInputAlphanumeric::~CPVUserInputAlphanumeric ()

Destructor.

4.6.3 Member Function Documentation**4.6.3.1 OSCL_IMPORT_REF uint8* CPVUserInputAlphanumeric::GetInput ()**

Return the user input alphanumeric user input

Returns:

Returns pointer to alphanumeric user input.

4.6.3.2 OSCL_IMPORT_REF uint16 CPVUserInputAlphanumeric::GetLength ()

Return the size of alphanumeric user input

Returns:

Returns size of alphanumeric user input.

4.6.3.3 OSCL_IMPORT_REF PV2WayUserInputType CPVUserInputAlphanumeric::GetType () [virtual]

Virtual function to return the user input type

Implements [CPVUserInput](#).

4.6.4 Field Documentation**4.6.4.1 uint16 CPVUserInputAlphanumeric::iLength [protected]****4.6.4.2 uint8* CPVUserInputAlphanumeric::ipInput [protected]**

The input alphanumeric string.


The documentation for this class was generated from the following file:

- [pv_2way_h324m_types.h](#)

4.7 CPVUserInputDtmf Class Reference

```
#include <pv_2way_h324m_types.h>
```

Inheritance diagram for CPVUserInputDtmf::

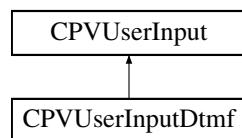

Public Methods

- OSCL_IMPORT_REF CPVUserInputDtmf (uint8 aInput, bool aUpdate, uint16 aDuration=0)
- OSCL_IMPORT_REF ~CPVUserInputDtmf ()
- OSCL_IMPORT_REF PV2WayUserInputType GetType ()
- OSCL_IMPORT_REF uint8 GetInput ()
- OSCL_IMPORT_REF bool IsUpdate ()
- OSCL_IMPORT_REF uint16 GetDuration ()

4.7.1 Detailed Description

CPVUserInputDtmf Class

CPVUserInputDtmf class contains DTMF signal information from an H.245 UserInputIndication message.

4.7.2 Constructor & Destructor Documentation

4.7.2.1 OSCL_IMPORT_REF CPVUserInputDtmf::CPVUserInputDtmf (uint8 *aInput*, bool *aUpdate*, uint16 *aDuration* = 0)

Constructor of CPVUserInputDtmf class.

Parameters:

aInput The input DTMF tone.

aUpdate Indicates if this is an update to a continuing DTMF tone.

aDuration The duration of the update in milli-seconds. @leave This method can leave with one of the following error codes KErrNoMemory if the SDK failed to allocate memory during this operation.

Returns:

void

4.7.2.2 OSCL_IMPORT_REF CPVUserInputDtmf::~CPVUserInputDtmf ()

Destructor.

4.7.3 Member Function Documentation

4.7.3.1 OSCL_IMPORT_REF uint16 CPVUserInputDtmf::GetDuration ()

Return the duration of the update.

Returns:

Returns the duration of the update.

4.7.3.2 OSCL_IMPORT_REF uint8 CPVUserInputDtmf::GetInput ()

Return the user input DTMF tone

Returns:

Returns the input DTMF tone.

4.7.3.3 OSCL_IMPORT_REF PV2WayUserInputType CPVUserInputDtmf::GetType () [virtual]

Virtual function to return the user input type

Implements [CPVUserInput](#).

4.7.3.4 OSCL_IMPORT_REF bool CPVUserInputDtmf::IsUpdate ()

Return if the DTMF tone is an update

Returns:

Returns if the input DTMF tone is an update.

The documentation for this class was generated from the following file:

- [pv_2way_h324m_types.h](#)

4.8 CPVVideoSpatialTemporalTradeoff Class Reference

```
#include <pv_2way_h324m_types.h>
```

Public Methods

- OSCL_IMPORT_REF CPVVideoSpatialTemporalTradeoff (TPVChannelId aChannelId, uint8 aTradeoff)
- OSCL_IMPORT_REF ~CPVVideoSpatialTemporalTradeoff ()
- OSCL_IMPORT_REF TPVChannelId GetChannelId ()
- OSCL_IMPORT_REF uint8 GetTradeoff ()
- OSCL_IMPORT_REF void addRef ()
- OSCL_IMPORT_REF void removeRef ()

4.8.1 Constructor & Destructor Documentation

4.8.1.1 OSCL_IMPORT_REF CPVVideoSpatialTemporalTradeoff::CPVVideoSpatialTemporalTradeoff (TPVChannelId *aChannelId*, uint8 *aTradeoff*)

4.8.1.2 OSCL_IMPORT_REF CPVVideoSpatialTemporalTradeoff::~CPVVideoSpatialTemporalTradeoff ()

4.8.2 Member Function Documentation

4.8.2.1 OSCL_IMPORT_REF void CPVVideoSpatialTemporalTradeoff::addRef ()

4.8.2.2 OSCL_IMPORT_REF TPVChannelId CPVVideoSpatialTemporalTradeoff::GetChannelId ()

4.8.2.3 OSCL_IMPORT_REF uint8 CPVVideoSpatialTemporalTradeoff::GetTradeoff ()

4.8.2.4 OSCL_IMPORT_REF void CPVVideoSpatialTemporalTradeoff::removeRef ()

The documentation for this class was generated from the following file:

- [pv_2way_h324m_types.h](#)

4.9 H324MConfigInterface Class Reference

```
#include <tsc_h324m_config_interface.h>
```

Public Methods

- virtual void [SetObserver](#) (H324MConfigObserver *aObserver)=0
- virtual PVMFCommandId [SetMultiplexLevel](#) (TPVH223Level aLevel, OsclAny *aContextData=NULL)=0
- virtual PVMFCommandId [SetMaxSduSize](#) (TPVAdaptationLayer aLayer, int32 aSize, OsclAny *aContextData=NULL)=0
- virtual PVMFCommandId [SetMaxSduSizeR](#) (TPVAdaptationLayer aLayer, int32 aSize, OsclAny *aContextData=NULL)=0
- virtual PVMFCommandId [SetCodecPreference](#) (Oscl_Vector< PVMFFormatType, OsclMemAllocator > &aIncomingAudio, Oscl_Vector< PVMFFormatType, OsclMemAllocator > &aIncomingVideo, Oscl_Vector< PVMFFormatType, OsclMemAllocator > &aOutGoingAudio, Oscl_Vector< PVMFFormatType, OsclMemAllocator > &aOutGoingVideo, OsclAny *aContextData=NULL)=0
- virtual PVMFCommandId [SetFormatSpecificInfo](#) (PVMFFormatType aMediaFormat, const uint8 *apFormatSpecificInfo, uint32 aFormatSpecificInfoLen, OsclAny *aContextData=NULL)=0
- virtual PVMFCommandId [SetA12SequenceNumbers](#) (int32 aSeqNumWidth, OsclAny *aContextData=NULL)=0
- virtual PVMFCommandId [SetA13ControlFieldOctets](#) (int32 aCfo, OsclAny *aContextData=NULL)=0
- virtual PVMFCommandId [SetMaxPduSize](#) (int32 aMaxPduSize, OsclAny *aContextData=NULL)=0
- virtual PVMFCommandId [SetTerminalType](#) (uint8 aTerminalType, OsclAny *aContextData=NULL)=0
- virtual PVMFCommandId [SetALConfiguration](#) (TPVMediaType_t aMediaType, TPVAdaptationLayer aLayer, bool aAllow, bool aUse=true, OsclAny *aContextData=NULL)=0
- virtual PVMFCommandId [SendRme](#) (OsclAny *aContextData=NULL)=0
- virtual PVMFCommandId [SetMaxMuxPduSize](#) (int32 aRequestMaxMuxPduSize, OsclAny *aContextData=NULL)=0
- virtual PVMFCommandId [SetMaxMuxCcsrlSduSize](#) (int32 aMaxCcsrlSduSize, OsclAny *aContextData=NULL)=0
- virtual PVMFCommandId [FastUpdate](#) (PVMFNodeInterface &aTrack, OsclAny *aContextData=NULL)=0
- virtual PVMFCommandId [SendRtd](#) (OsclAny *aContextData=NULL)=0
- virtual PVMFCommandId [SetVendor](#) (uint8 cc, uint8 ext, uint32 mc, const uint8 *aProduct, uint16 aProductLen, const uint8 *aVersion, uint16 aVersionLen, OsclAny *aContextData=NULL)=0
- virtual PVMFCommandId [SendEndSession](#) (OsclAny *aContextData=NULL)=0
- virtual PVMFCommandId [SetEndSessionTimeout](#) (uint32 aTimeout, OsclAny *aContextData=NULL)=0
- virtual PVMFCommandId [SetTimerCounter](#) (TPVH324TimerCounter aTimerCounter, uint8 aSeries, uint32 aSeriesOffset, uint32 aValue, OsclAny *aContextData=NULL)=0
- virtual PVMFCommandId [SetVideoResolutions](#) (TPVDirection aDirection, Oscl_Vector< PVMFVideoResolutionRange, OsclMemAllocator > &aResolutions, OsclAny *aContextData=NULL)=0
- virtual PVMFCommandId [SendVendorId](#) (OsclAny *aContextData=NULL)=0
- virtual PVMFCommandId [SendVideoTemporalSpatialTradeoffCommand](#) (TPVChannelId aLogicalChannel, uint8 aTradeoff, OsclAny *aContextData=NULL)=0

- virtual PVMFCommandId [SendVideoTemporalSpatialTradeoffIndication](#) (TPVChannelId aLogicalChannel, uint8 aTradeoff, OsclAny *aContextData=NULL)=0
- virtual PVMFCommandId [SendLogicalChannelActiveIndication](#) (TPVChannelId aLogicalChannel, OsclAny *aContextData=NULL)=0
- virtual PVMFCommandId [SendLogicalChannelInactiveIndication](#) (TPVChannelId aLogicalChannel, OsclAny *aContextData=NULL)=0
- virtual PVMFCommandId [SendSkewIndication](#) (TPVChannelId aLogicalChannel1, TPVChannelId aLogicalChannel2, uint16 aSkew, OsclAny *aContextData=NULL)=0
- virtual PVMFCommandId [SetLogicalChannelBufferingMs](#) (uint32 aInBufferingMs, uint32 aOutBufferingMs, OsclAny *aContextData=NULL)=0
- virtual PVMFCommandId [SendUserInput](#) ([CPVUserInput](#) *user_input, OsclAny *aContextData=NULL)=0
- virtual PVMFCommandId [SetWnsrp](#) (const bool aEnableWnsrp, OsclAny *aContextData=NULL)=0

4.9.1 Member Function Documentation

4.9.1.1 virtual PVMFCommandId H324MConfigInterface::FastUpdate ([PVMFNodeInterface & aTrack](#), OsclAny * aContextData = NULL) [pure virtual]

This API may be called only after the media source has been successfully added to the pv2way engine. It causes the 2way engine to immediately send out a fast update frame specific to the media type identified by the aTrack parameter.

Parameters:

aContextData Optional opaque data that will be passed back to the user with the command response
aTrack The identifier for the track

Returns:

A unique command id for asynchronous completion

4.9.1.2 virtual PVMFCommandId H324MConfigInterface::SendEndSession (OsclAny * aContextData = NULL) [pure virtual]

Sends an end session command to the peer. Only to be used for testing purposes.

Parameters:

aContextData Optional opaque data that will be passed back to the user with the command response

Returns:

A unique command id for asynchronous completion

4.9.1.3 virtual PVMFCommandId H324MConfigInterface::SendLogicalChannelActiveIndication (TPVChannelId aLogicalChannel, OsclAny * aContextData = NULL) [pure virtual]

This API allows the user to send a logicalChannelActive indication to the peer. It is an indication to the peer that the channel that was paused and for which it received logicalChannelInactive indication is now ready to send data on the channel defined by Logical channel Id

4.9.1.4 virtual PVMFCommandId H324MConfigInterface::SendLogicalChannelInactive-Indication (TPVChannelId *aLogicalChannel*, OsclAny * *aContextData* = NULL) [pure virtual]

This API allows the user to send a logicalChannelInactive indication to the peer. It is an indication to the peer that the channel has been paused the channel and will not send any data on the channel defined by Logical channel Id

4.9.1.5 virtual PVMFCommandId H324MConfigInterface::SendRme (OsclAny * *aContextData* = NULL) [pure virtual]

This API allows the user to specify whether Request Multiplex Entry is sent to the remote terminal after TCS

Parameters:

aSendRme If true, RME is sent to the peer after TCS

aContextData Optional opaque data that will be passed back to the user with the command response

Returns:

A unique command id for asynchronous completion

4.9.1.6 virtual PVMFCommandId H324MConfigInterface::SendRtd (OsclAny * *aContextData* = NULL) [pure virtual]

Sends a Round Trip Determination message to the peer and indicates the round trip delay to the caller on completion of the command. The round trip delay is stored in 4 bytes in the local buffer of the completion event in network byte order.

Parameters:

aContextData Optional opaque data that will be passed back to the user with the command response

Returns:

A unique command id for asynchronous completion

4.9.1.7 virtual PVMFCommandId H324MConfigInterface::SendSkewIndication (TPVChannelId *aLogicalChannel1*, TPVChannelId *aLogicalChannel2*, uint16 *aSkew*, OsclAny * *aContextData* = NULL) [pure virtual]

This API allows the user to send a SkewIndication to the peer. Skew is measured in milliseconds, and indicates the maximum number of milliseconds that the data on logicalChannel2 is delayed from the data on logicalChannel1 as delivered to the network transport.

4.9.1.8 virtual PVMFCommandId H324MConfigInterface::SendUserInput (CPVUserInput * *user_input*, OsclAny * *aContextData* = NULL) [pure virtual]

Causes the pv2way to send the specified user input to the remote terminal using control channel. The user input can be either DTMF or Alphanumeric

Parameters:

user_input A pointer to either [CPVUserInputDtmf](#) or [CPVUserInputAlphanumeric](#)

aContextData Optional opaque data that will be passed back to the user with the command response

Returns:

A unique command id for asynchronous completion

**4.9.1.9 virtual PVMFCommandId H324MConfigInterface::SendVendorId (OsclAny *
aContextData = NULL) [pure virtual]**

This API allows the user to send the vendor id info to the peer. Note: Calling this API during call-setup negotiations can affect the time for call-setup adversely.

**4.9.1.10 virtual PVMFCommandId H324MConfigInterface::SendVideoTemporalSpatialTradeoff-
Command (TPVChannelId *aLogicalChannel*, uint8 *aTradeoff*, OsclAny * *aContextData* =
NULL) [pure virtual]**

This API allows the user to send a videoTemporalSpatialTradeOff command to the peer. It is a request to the remote encoder to adjust its encoding in accordance with the tradeoff value. A value of 0 indicates a high spatial resolution and a value of 31 indicates a high frame rate. The values from 0 to 31 indicate monotonically a higher frame rate. Actual values do not correspond to precise values of spatial resolution or frame rate.

**4.9.1.11 virtual PVMFCommandId H324MConfigInterface::SendVideoTemporalSpatialTradeoff-
Indication (TPVChannelId *aLogicalChannel*, uint8 *aTradeoff*, OsclAny * *aContextData* =
NULL) [pure virtual]**

This API allows the user to send a videoTemporalSpatialTradeOff command to the peer. It is an indication to the remote decoder that the local encoder has adjusted its encoding parameters according to the tradeoff value. A value of 0 indicates a high spatial resolution and a value of 31 indicates a high frame rate. The values from 0 to 31 indicate monotonically a higher frame rate. Actual values do not correspond to precise values of spatial resolution or frame rate.

**4.9.1.12 virtual PVMFCommandId H324MConfigInterface::SetAl2SequenceNumbers (int32
aSeqNumWidth, OsclAny * *aContextData* = NULL) [pure virtual]**

This API allows the user to specify the sequence number field for AL2

Parameters:

aSeqNumWidth The number of octets to use for AL2 sequence numbers. Allowed values are 0, 1.

aContextData Optional opaque data that will be passed back to the user with the command response

Returns:

A unique command id for asynchronous completion

**4.9.1.13 virtual PVMFCommandId H324MConfigInterface::SetAl3ControlFieldOctets (int32
aCfo, OsclAny * *aContextData* = NULL) [pure virtual]**

This API allows the user to specify the control field octets field for AL3

Parameters:

aCfo The number of octets to use for AL3 CFO. Allowed values are 0, 1, 2.

aContextData Optional opaque data that will be passed back to the user with the command response

Returns:

A unique command id for asynchronous completion

4.9.1.14 virtual PVMFCommandId H324MConfigInterface::SetALConfiguration

(**TPVMediaType_t aMediaType**, **TPVAdaptationLayer aLayer**, **bool aAllow**, **bool aUse = true**, **OsclAny * aContextData = NULL**) [pure virtual]

This API allows the user to specify the allowable adaptation layers for audio and video. By default AL2 is allowed for audio and AL2, AL3 are allowed for video

Parameters:

aMediaType The media type, i.e audio, video, data

aLayer The adaptation layer

aAllow Is this adaptation layer allowed for this media type ?

aUse Is this adaptation layer used for video media type ?

aContextData Optional opaque data that will be passed back to the user with the command response

Returns:

A unique command id for asynchronous completion

4.9.1.15 virtual PVMFCommandId H324MConfigInterface::SetCodecPreference (Oscl_Vector<

PVMFFormatType, **OsclMemAllocator** > & *aIncomingAudio*, **Oscl_Vector<**

PVMFFormatType, **OsclMemAllocator** > & *aIncomingVideo*, **Oscl_Vector<**

PVMFFormatType, **OsclMemAllocator** > & *aOutGoingAudio*, **Oscl_Vector<**

PVMFFormatType, **OsclMemAllocator** > & *aOutGoingVideo*, **OsclAny * aContextData = NULL**) [pure virtual]

This API allows the user to specify the preference order for supported media codecs. If input vector has elements, then only these elements are used in terminal capabilities exchange.

Parameters:

aIncomingAudio The incoming audio decoder preference order

aIncomingVideo The incoming video decoder preference order

aOutgoingAudio The outgoing audio encoder preference order

aOutgoingVideo The outgoing video decoder preference order

aContextData Optional opaque data that will be passed back to the user with the command response

Returns:

A unique command id for asynchronous completion

4.9.1.16 virtual PVMFCommandId H324MConfigInterface::SetEndSessionTimeout (uint32 *aTimeout*, OsclAny * *aContextData* = NULL) [pure virtual]

Sets the disconnect timeout interval.

Parameters:

aTimeout The timeout value in seconds

aContextData Optional opaque data that will be passed back to the user with the command response

Returns:

A unique command id for asynchronous completion

4.9.1.17 virtual PVMFCommandId H324MConfigInterface::SetFormatSpecificInfo (PVMFFormatType *aMediaFormat*, const uint8 * *apFormatSpecificInfo*, uint32 *aFormatSpecificInfoLen*, OsclAny * *aContextData* = NULL) [pure virtual]

This API allows the user to specify the format specific info for supported media encoders.

Parameters:

aMediaFormat The outgoing media format

apFormatSpecificInfo The format specific info

aFormatSpecificInfoLen The length of the format specific info in bytes

aContextData Optional opaque data that will be passed back to the user with the command response

Returns:

A unique command id for asynchronous completion

4.9.1.18 virtual PVMFCommandId H324MConfigInterface::SetLogicalChannelBufferingMs (uint32 *aInBufferingMs*, uint32 *aOutBufferingMs*, OsclAny * *aContextData* = NULL) [pure virtual]

This API allows the user to configure the logical channel buffer sizes for incoming and outgoing logical channels.

Parameters:

aDirection The direction (Rx or Tx).

aBufferingMs The amount of buffering in milliseconds.

aContextData Optional opaque data that will be passed back to the user with the command response

4.9.1.19 virtual PVMFCommandId H324MConfigInterface::SetMaxMuxCcsrlSduSize (int32 *aMaxCcsrlSduSize*, OsclAny * *aContextData* = NULL) [pure virtual]

This API sets the max ccsrl sdu size

Parameters:

aMaxCcsrlSduSize The max ccsrl sdu size

aContextData Optional opaque data that will be passed back to the user with the command response

Returns:

A unique command id for asynchronous completion

4.9.1.20 virtual PVMFCommandId H324MConfigInterface::SetMaxMuxPduSize (int32 *aRequestMaxMuxPduSize*, OsclAny * *aContextData* = NULL) [pure virtual]

This API causes a maxMuxPduSize request to be sent to the remote terminal if set to a valid value (64 - 255). This is done after TCS if the remote terminal supports the maxMuxPduCapability

Parameters:

aRequestMaxMuxPduSize The max mux pdu size

aContextData Optional opaque data that will be passed back to the user with the command response

Returns:

A unique command id for asynchronous completion

4.9.1.21 virtual PVMFCommandId H324MConfigInterface::SetMaxPduSize (int32 *aMaxPduSize*, OsclAny * *aContextData* = NULL) [pure virtual]

This API allows the user to limit the size of the outgoing h223 pdus

Parameters:

aMaxPduSize The max pdu size

aContextData Optional opaque data that will be passed back to the user with the command response

Returns:

A unique command id for asynchronous completion

4.9.1.22 virtual PVMFCommandId H324MConfigInterface::SetMaxSduSize (TPVAdaptationLayer *aLayer*, int32 *aSize*, OsclAny * *aContextData* = NULL) [pure virtual]

This API allows the user to specify maximum outgoing sdu sizes for each adaptation layer

Parameters:

aLayer The h223 adaptation layer type

aSize The sdu size

aContextData Optional opaque data that will be passed back to the user with the command response

Returns:

A unique command id for asynchronous completion

4.9.1.23 virtual PVMFCommandId H324MConfigInterface::SetMaxSduSizeR (TPVAdaptationLayer *aLayer*, int32 *aSize*, OsclAny * *aContextData* = NULL) [pure virtual]

This API allows the user to specify maximum incoming sdu sizes for each adaptation layer. This is indicated to the peer via the TCS

Parameters:

aLayer The h223 adaptation layer type

aSize The sdu size

aContextData Optional opaque data that will be passed back to the user with the command response

Returns:

A unique command id for asynchronous completion

**4.9.1.24 virtual PVMFCommandId H324MConfigInterface::SetMultiplexLevel (TPVH223Level
aLevel, OsclAny * aContextData = NULL) [pure virtual]**

This API allows the user to specify the starting H223 multiplex level

Parameters:

aLevel The starting H223 multiplex level. Note that the final level that is negotiated will depend on the starting level of the peer

aContextData Optional opaque data that will be passed back to the user with the command response

Returns:

A unique command id for asynchronous completion

**4.9.1.25 virtual void H324MConfigInterface::SetObserver (H324MConfigObserver * aObserver
[pure virtual])**

This API allows the user to specify separate observers for the 324m interface. Otherwise, the default observers will be used

Parameters:

aObserver the observer for command status and for unsolicited informational events

**4.9.1.26 virtual PVMFCommandId H324MConfigInterface::SetTerminalType (uint8
aTerminalType, OsclAny * aContextData = NULL) [pure virtual]**

This API allows the user to specify the terminal type that is advertised to the peer. This can be used to force the local terminal to be master/slave when communicating with a peer 324m terminal for testing purposes.

Parameters:

aTerminalType The terminal type

aContextData Optional opaque data that will be passed back to the user with the command response

Returns:

A unique command id for asynchronous completion

**4.9.1.27 virtual PVMFCommandId H324MConfigInterface::SetTimerCounter
(TPVH324TimerCounter aTimerCounter, uint8 aSeries, uint32 aSeriesOffset, uint32
aValue, OsclAny * aContextData = NULL) [pure virtual]**

Sets an H.324 timer/counter value. This should be called before ConnectL is invoked. The supported timers are: T106 Master Slave Determination (in units of 1s) T101 Capability Exchange (in units of 1s) T103 Uni-directional and Bi-directional Logical Channel Signalling (in units of 1s) T108 Close Logical Channel (in

units of 1s) T104 H.223 Multiplex Table (in units of 1s) T109 Mode Request (in units of 1s) T105 Round Trip Delay (in units of 1s) T107 Request Multiplex Entry (in units of 100ms) T401 SRP retransmission (in units of 100ms) The supported counters are: N100 H245 (TCS, MSD) N401 SRP retransmission

Parameters:

aTimerCounter Identifies whether a timer or counter is being set.

aSeries Identifies the H.324 timer/counter series.

aSeriesOffset Specifies the offset within a particular series. E.g. aTimerCounter=EH324Timer, aSeries=1, aSeriesOffset=1 indicates T101. aTimerCounter=EH324Timer, aSeries=4, aSeriesOffset=1 indicates T401. aTimerCounter=EH324Counter, aSeries=4, aSeriesOffset=1 indicates T401.

aValue The new value for the H.324 timer/counter

aContextData Optional opaque data that will be passed back to the user with the command response

4.9.1.28 virtual PVMFCommandId H324MConfigInterface::SetVendor (uint8 *cc*, uint8 *ext*, uint32 *mc*, const uint8 * *aProduct*, uint16 *aProductLen*, const uint8 * *aVersion*, uint16 *aVersionLen*, OsclAny * *aContextData* = NULL) [pure virtual]

Sets the vendor identification data. This does not cause the stack to issue a vendor identification request. Set to NULL to disable sending vendor id. If set to a valid parameter before Connect, it will cause the stack to automatically send it along with the TCS message.

Parameters:

cc T35 Country code

ext T35 Extension

mc T35 Manufacturer code

aProduct Product number

aVersion Version number

aContextData Optional opaque data that will be passed back to the user with the command response

Returns:

A unique command id for asynchronous completion

4.9.1.29 virtual PVMFCommandId H324MConfigInterface::SetVideoResolutions ([TPVDirection](#) *aDirection*, Oscl_Vector< PVMFVideoResolutionRange, OsclMemAllocator > & *aResolutions*, OsclAny * *aContextData* = NULL) [pure virtual]

This API allows the user to specify the supported resolutions for video for transmit and receive.

Parameters:

aDirection The direction (Tx/Rx) for which the capability is specified.

aResolutions An array of resolutions.

aContextData Optional opaque data that will be passed back to the user with the command response

4.9.1.30 virtual PVMFCommandId H324MConfigInterface::SetWnsrp (const bool *aEnableWnsrp*, OsclAny * *aContextData* = NULL) [pure virtual]

Causes the pv2way to send the specified user input to the remote terminal using control channel.

Parameters:

aEnableWnsrp Boolean whether to enable Wnsrp or not

aContextData Optional opaque data that will be passed back to the user with the command response

Returns:

A unique command id for asynchronous completion

The documentation for this class was generated from the following file:

- [tsc_h324m_config_interface.h](#)

4.10 H324MConfigObserver Class Reference

```
#include <tsc_h324m_config_interface.h>
```

Public Methods

- virtual ~H324MConfigObserver ()
- virtual void H324MConfigCommandCompletedL (PVMFCmdResp &aResponse)=0
- virtual void H324MConfigHandleInformationalEventL (PVMFAsyncEvent &aNotification)=0

4.10.1 Constructor & Destructor Documentation

4.10.1.1 virtual H324MConfigObserver::~H324MConfigObserver () [inline, virtual]

4.10.2 Member Function Documentation

4.10.2.1 virtual void H324MConfigObserver::H324MConfigCommandCompletedL
(PVMFCmdResp &*aResponse*) [pure virtual]

4.10.2.2 virtual void H324MConfigObserver::H324MConfigHandleInformationalEventL
(PVMFAsyncEvent &*aNotification*) [pure virtual]

The documentation for this class was generated from the following file:

- [tsc_h324m_config_interface.h](#)

4.11 H324MReverseParametersExtensionInterface Class Reference

```
#include <tsc_h324m_config_interface.h>
```

Public Methods

- virtual const PvmfMimeType * [GetFormatCapabilities \(\)=0](#)
- virtual void [SetPortTag \(int32 aPortTag\)=0](#)
- virtual int32 [GetPortTag \(\) const=0](#)

4.11.1 Detailed Description

Extension interface to indicate reverse logical channel parameters to the user of the stack node

4.11.2 Member Function Documentation

4.11.2.1 virtual const PvmfMimeType* H324MReverseParametersExtensionInterface::GetFormatCapabilities () [pure virtual]

Returns:

The reverse media format and capabilities.

4.11.2.2 virtual int32 H324MReverseParametersExtensionInterface::GetPortTag () [pure virtual]

Returns:

The port tag for the reverse channel

4.11.2.3 virtual void H324MReverseParametersExtensionInterface::SetPortTag (int32 *aPortTag*) [pure virtual]

Parameters:

aPortTag The port tag to use for the reverse channel if it is accepted.


The documentation for this class was generated from the following file:

- [tsc_h324m_config_interface.h](#)

4.12 PV2Way324ConnectOptions Class Reference

```
#include <pv_2way_h324m_types.h>
```

Inheritance diagram for PV2Way324ConnectOptions::

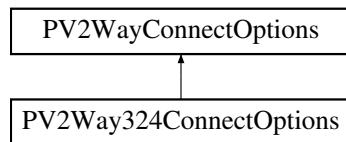

Public Methods

- [PV2Way324ConnectOptions](#) (uint32 aDisconnectTimeInterval)
- [PV2Way324ConnectOptions](#) ()
- virtual [~PV2Way324ConnectOptions](#) ()
- virtual void [GetConnectInfoClassName](#) (OSCL_wString &aClassName)

Data Fields

- uint32 [iDisconnectTimeInterval](#)

4.12.1 Detailed Description

PV2Way324ConnectOptions Class

PV2Way324ConnectOptions implements the [PV2WayConnectOptions](#) interface and is used for 324M specific initialization.

4.12.2 Constructor & Destructor Documentation

4.12.2.1 PV2Way324ConnectOptions::PV2Way324ConnectOptions (uint32 *aDisconnectTimeInterval*) [inline]

Constructor

Parameters:

disconnectTimeout The interval to wait after initiating a disconnect before stopping signalling

4.12.2.2 PV2Way324ConnectOptions::PV2Way324ConnectOptions () [inline]

4.12.2.3 virtual PV2Way324ConnectOptions::~PV2Way324ConnectOptions () [inline, virtual]

4.12.3 Member Function Documentation

4.12.3.1 virtual void PV2Way324ConnectOptions::GetConnectInfoClassName (OSCL_wString & *aClassName*) [inline, virtual]

Retrieves the class name

Parameters:

aClassName A reference to an OSCL_wString, which is to hold the subclass name, this class will assign the string "CPV2Way324ConnectInfo"

Returns:

void

Implements [PV2WayConnectOptions](#).

4.12.4 Field Documentation

4.12.4.1 uint32 PV2Way324ConnectOptions::iDisconnectTimeoutInterval

The disconnect timeout interval in units of 100ms


The documentation for this class was generated from the following file:

- [pv_2way_h324m_types.h](#)

4.13 PV2Way324InitInfo Class Reference

```
#include <pv_2way_h324m_types.h>
```

Inheritance diagram for PV2Way324InitInfo::

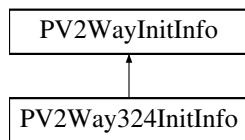

Public Methods

- virtual void [GetInitInfoClassName](#) (OSCL_wString &aClassName)
- [PV2Way324InitInfo](#) ()
- virtual [~PV2Way324InitInfo](#) ()

Data Fields

- uint16 [iMultiplexingDelayMs](#)

4.13.1 Detailed Description

PV2Way324InitInfo Class

PV2Way324InitInfo implements the PV2Way324InitInfo interface and is used for 324M specific initialization.

4.13.2 Constructor & Destructor Documentation

4.13.2.1 [PV2Way324InitInfo::PV2Way324InitInfo](#) () [inline]

4.13.2.2 [virtual PV2Way324InitInfo::~PV2Way324InitInfo](#) () [inline, virtual]

4.13.3 Member Function Documentation

4.13.3.1 [virtual void PV2Way324InitInfo::GetInitInfoClassName](#) (OSCL_wString &*aClassName*) [inline, virtual]

Retrieves the class name

Parameters:

aClassName A reference to an OSCL_wString, which is to hold the subclass name, this class will assign the string "CPV2Way324InitInfo"

Returns:

void

Implements [PV2WayInitInfo](#).

4.13.4 Field Documentation

4.13.4.1 uint16 PV2Way324InitInfo::iMultiplexingDelayMs

The Multiplexing delay in Milliseconds


The documentation for this class was generated from the following file:

- [pv_2way_h324m_types.h](#)

4.14 PV2WayConnectOptions Class Reference

```
#include <pv_2way_basic_types.h>
```

Inheritance diagram for PV2WayConnectOptions::

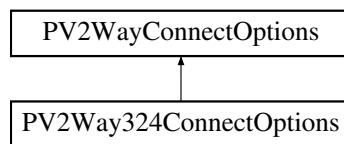

Public Methods

- [PV2WayConnectOptions \(\)](#)
- [PV2WayConnectOptions \(TPVLoopbackMode aLoopbackMode, uint8 *aLocalId, uint32 aLocalIdSize, uint8 *aRemoteId, uint32 aRemoteIdSize\)](#)
- virtual [~PV2WayConnectOptions \(\)](#)
- virtual void [GetConnectInfoClassName \(OSCL_wString &aClassName\)=0](#)

Data Fields

- [TPVLoopbackMode iLoopbackMode](#)
- [uint8 * iLocalId](#)
- [uint32 iLocalIdSize](#)
- [uint8 * iRemoteId](#)
- [uint32 iRemoteIdSize](#)

4.14.1 Detailed Description

PV2WayConnectOptions Class

PV2WayConnectOptions class contains options to be specified during connect

4.14.2 Constructor & Destructor Documentation

4.14.2.1 PV2WayConnectOptions::PV2WayConnectOptions () [inline]

Default Constructor

4.14.2.2 PV2WayConnectOptions::PV2WayConnectOptions (TPVLoopbackMode aLoopbackMode, uint8 * aLocalId, uint32 aLocalIdSize, uint8 * aRemoteId, uint32 aRemoteIdSize) [inline]

Constructor

Parameters:

aLoopbackMode The loopback mode to used during Connect

aLocalId, aLocalIdSize A unique octet string identifying the local terminal

aRemoteId, aRemoteIdSize A unique octet string identifying the peer (Used only in 2-Stage dialling)

Returns:

void

4.14.2.3 virtual PV2WayConnectOptions::~PV2WayConnectOptions () [inline, virtual]**4.14.3 Member Function Documentation****4.14.3.1 virtual void PV2WayConnectOptions::GetConnectInfoClassName (OSCL_wString & *aClassName*) [pure virtual]**

Pure virtual method that must be overridden. Retrieves class name

Parameters:

aClassName A reference to an OSCL_wString, which is to hold the subclass name

Returns:

void

Implemented in [PV2Way324ConnectOptions](#).

4.14.4 Field Documentation**4.14.4.1 uint8* PV2WayConnectOptions::iLocalId**

The id of the local terminal

4.14.4.2 uint32 PV2WayConnectOptions::iLocalIdSize

The size of the local id

4.14.4.3 TPVLoopbackMode PV2WayConnectOptions::iLoopbackMode

The loopback mode

4.14.4.4 uint8* PV2WayConnectOptions::iRemoteId

The id of the peer

4.14.4.5 uint32 PV2WayConnectOptions::iRemoteIdSize

The size of the remote id


The documentation for this class was generated from the following file:

- [pv_2way_basic_types.h](#)

4.15 PV2WayInitInfo Class Reference

```
#include <pv_2way_basic_types.h>
```

Inheritance diagram for PV2WayInitInfo::

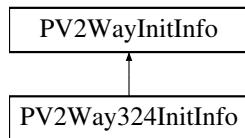

Public Methods

- virtual void [GetInitInfoClassName \(OSCL_wString &aClassName\)=0](#)
- virtual [~PV2WayInitInfo \(\)](#)

Data Fields

- Oscl_Vector< PVMFFormatType, OsclMemAllocator > [iOutgoingAudioFormats](#)
- Oscl_Vector< PVMFFormatType, OsclMemAllocator > [iOutgoingVideoFormats](#)
- Oscl_Vector< PVMFFormatType, OsclMemAllocator > [iIncomingAudioFormats](#)
- Oscl_Vector< PVMFFormatType, OsclMemAllocator > [iIncomingVideoFormats](#)

4.15.1 Detailed Description

PV2WayInitInfo Class

PV2WayInitInfo is an interface required for protocols specific classes pass to the PV2WayInterface's InitL() method

4.15.2 Constructor & Destructor Documentation

4.15.2.1 virtual PV2WayInitInfo::~PV2WayInitInfo () [inline, virtual]

4.15.3 Member Function Documentation

4.15.3.1 virtual void PV2WayInitInfo::GetInitInfoClassName (OSCL_wString & aClassName) [pure virtual]

pure virtual method that must be overridden to return the classname of the actual subclass

Implemented in [PV2Way324InitInfo](#).

4.15.4 Field Documentation

4.15.4.1 Oscl_Vector<PVMFFormatType, OsclMemAllocator> PV2WayInitInfo::iIncomingAudioFormats

The list of audio formats that can be received

4.15.4.2 Oscl_Vector<PVMFFormatType, OsclMemAllocator> PV2WayInitInfo::iIncoming-VideoFormats

The list of video formats that can be received

4.15.4.3 Oscl_Vector<PVMFFormatType, OsclMemAllocator> PV2WayInitInfo::iOutgoing-AudioFormats

The list of audio formats that can be transmitted

4.15.4.4 Oscl_Vector<PVMFFormatType, OsclMemAllocator> PV2WayInitInfo::iOutgoing-VideoFormats

The list of video formats that can be transmitted

The documentation for this class was generated from the following file:

- [pv_2way_basic_types.h](#)

4.16 PV2WayTestExtensionInterface Class Reference

```
#include <pv_2way_test_extension_interface.h>
```

Public Methods

- virtual void `addRef ()=0`
- virtual void `removeRef ()=0`
- virtual bool `queryInterface (const PVUuid &uuid, PVInterface *&iface)=0`
- virtual bool `NegotiatedFormatsMatch (Oscl_Vector< FormatCapabilityInfo, OsclMemAllocator > &iInAudFormatCapability, Oscl_Vector< FormatCapabilityInfo, OsclMemAllocator > &iOutAudFormatCapability, Oscl_Vector< FormatCapabilityInfo, OsclMemAllocator > &iInVidFormatCapability, Oscl_Vector< FormatCapabilityInfo, OsclMemAllocator > &iOutVidFormatCapability)=0`
- virtual bool `UsingExternalVideoDecBuffers ()=0`
- virtual bool `UsingExternalAudioDecBuffers ()=0`

4.16.1 Member Function Documentation

4.16.1.1 virtual void PV2WayTestExtensionInterface::addRef () [pure virtual]

Increment reference counter for this interface.

4.16.1.2 virtual bool PV2WayTestExtensionInterface::NegotiatedFormatsMatch (Oscl_Vector< FormatCapabilityInfo, OsclMemAllocator > &*iInAudFormatCapability*, Oscl_Vector< FormatCapabilityInfo, OsclMemAllocator > &*iOutAudFormatCapability*, Oscl_Vector< FormatCapabilityInfo, OsclMemAllocator > &*iInVidFormatCapability*, Oscl_Vector< FormatCapabilityInfo, OsclMemAllocator > &*iOutVidFormatCapability*) [pure virtual]

4.16.1.3 virtual bool PV2WayTestExtensionInterface::queryInterface (const PVUuid & *uuid*, PVInterface *& *iface*) [pure virtual]

Query for a pointer to an instance of the interface specified by the UUID.

Parameters:

uuid UUID of the interface to be queried.

iface Output parameter where a pointer to an instance of the requested interface is stored if the interface is supported.

Returns:

True if successful, else false.

4.16.1.4 virtual void PV2WayTestExtensionInterface::removeRef () [pure virtual]

Decrement reference counter for this interface.

4.16.1.5 **virtual bool PV2WayTestExtensionInterface::UsingExternalAudioDecBuffers ()** [pure virtual]

4.16.1.6 **virtual bool PV2WayTestExtensionInterface::UsingExternalVideoDecBuffers ()** [pure virtual]


The documentation for this class was generated from the following file:

- [pv_2way_test_extension_interface.h](#)

4.17 PVH223Al1Config Class Reference

```
#include <pv_2way_h324m_types.h>
```

Inheritance diagram for PVH223Al1Config::

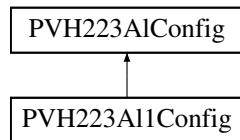

Public Methods

- [PVH223AlIndex IsA \(\) const](#)

Data Fields

- bool [iFramed](#)

4.17.1 Detailed Description

PVH223Al1Config class

This class defines configuration information for H.223 Adaptation Layer 1

4.17.2 Member Function Documentation

4.17.2.1 [PVH223AlIndex PVH223Al1Config::IsA \(\) const \[inline, virtual\]](#)

Implements [PVH223AlConfig](#).

4.17.3 Field Documentation

4.17.3.1 [bool PVH223Al1Config::iFramed](#)


The documentation for this class was generated from the following file:

- [pv_2way_h324m_types.h](#)

4.18 PVH223Al2Config Class Reference

```
#include <pv_2way_h324m_types.h>
```

Inheritance diagram for PVH223Al2Config::

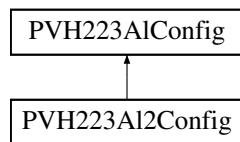

Public Methods

- [PVH223AlIndex IsA \(\) const](#)

Data Fields

- bool [iUseSequenceNumbers](#)

4.18.1 Detailed Description

PVH223Al2Config class

This class defines configuration information for H.223 Adaptation Layer 2

4.18.2 Member Function Documentation

4.18.2.1 [PVH223AlIndex PVH223Al2Config::IsA \(\) const \[inline, virtual\]](#)

Implements [PVH223AlConfig](#).

4.18.3 Field Documentation

4.18.3.1 [bool PVH223Al2Config::iUseSequenceNumbers](#)


The documentation for this class was generated from the following file:

- [pv_2way_h324m_types.h](#)

4.19 PVH223Al3Config Class Reference

```
#include <pv_2way_h324m_types.h>
```

Inheritance diagram for PVH223Al3Config::

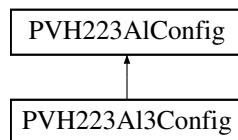

Public Methods

- [PVH223AlIndex IsA \(\) const](#)

Data Fields

- uint32 [iControlFieldOctets](#)
- uint32 [iSendBufferSize](#)

4.19.1 Detailed Description

PVH223Al3Config class

This class defines configuration information for H.223 Adaptation Layer 3

4.19.2 Member Function Documentation

4.19.2.1 [PVH223AlIndex PVH223Al3Config::IsA \(\) const \[inline, virtual\]](#)

Implements [PVH223AlConfig](#).

4.19.3 Field Documentation

4.19.3.1 [uint32 PVH223Al3Config::iControlFieldOctets](#)

4.19.3.2 [uint32 PVH223Al3Config::iSendBufferSize](#)


The documentation for this class was generated from the following file:

- [pv_2way_h324m_types.h](#)

4.20 PVH223AIConfig Class Reference

```
#include <pv_2way_h324m_types.h>
```

Inheritance diagram for PVH223AIConfig::

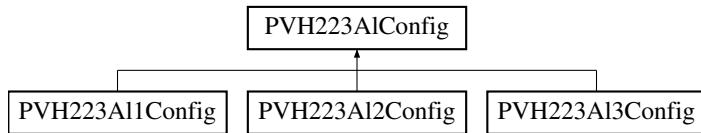

Public Types

- enum [PVH223AIIndex](#) { [PVH223_AL1](#) = 1, [PVH223_AL2](#) = 2, [PVH223_AL3](#) = 4 }

Public Methods

- virtual [~PVH223AIConfig\(\)](#)
- virtual [PVH223AIIndex IsA\(\)](#) const=0

4.20.1 Detailed Description

PVH223AIConfig class

This is the base class for H.223 Adaptation Layer configuration

4.20.2 Member Enumeration Documentation

4.20.2.1 enum PVH223AIConfig::PVH223AIIndex

Enumeration values:

- [PVH223_AL1](#)
- [PVH223_AL2](#)
- [PVH223_AL3](#)

4.20.3 Constructor & Destructor Documentation

4.20.3.1 virtual PVH223AIConfig::~PVH223AIConfig() [inline, virtual]

4.20.4 Member Function Documentation

4.20.4.1 virtual [PVH223AIIndex](#) PVH223AIConfig::IsA() [pure virtual]

Implemented in [PVH223AI1Config](#), [PVH223AI2Config](#), and [PVH223AI3Config](#).

The documentation for this class was generated from the following file:

- [pv_2way_h324m_types.h](#)

4.21 PVMFComponentInterface Class Reference

```
#include <tsc_h324m_config_interface.h>
```

Public Methods

- [PVMFComponentInterface \(\)](#)
- void [addRef \(\)](#)
- void [removeRef \(\)](#)

Protected Attributes

- int32 [iRefCount](#)

4.21.1 Constructor & Destructor Documentation

4.21.1.1 PVMFComponentInterface::PVMFComponentInterface () [inline]

4.21.2 Member Function Documentation

4.21.2.1 void PVMFComponentInterface::addRef () [inline]

4.21.2.2 void PVMFComponentInterface::removeRef () [inline]

4.21.3 Field Documentation

4.21.3.1 int32 PVMFComponentInterface::iRefCount [protected]

The documentation for this class was generated from the following file:

- [tsc_h324m_config_interface.h](#)

Chapter 5

pv2way_engine File Documentation

5.1 pv_2way_basic_types.h File Reference

```
#include "pvmf_format_type.h"
#include "oscl_vector.h"
#include "oscl_mem.h"
```

Data Structures

- class PV2WayConnectOptions
- class PV2WayInitInfo

Typedefs

- typedef enum TPVTerminalType PV2WayTerminalType
- typedef enum TPVLoopbackMode PV2WayLoopbackMode
- typedef enum TPVDirection PV2WayDirection
- typedef enum TPVMediaType_t PV2WayMediaType
- typedef unsigned int PVTrackId

Enumerations

- enum TPVTerminalType { PV_323, PV_324M, PV_SIP, PV_TERMINAL_TYPE_NONE }
- enum TPVLoopbackMode { PV_LOOPBACK_NONE, PV_LOOPBACK_COMM, PV_LOOPBACK_ENGINE, PV_LOOPBACK_MUX }
- enum TPVDirection { PV_DIRECTION_NONE = 0, INCOMING = 1, OUTGOING = 2, PV_DIRECTION_BOTH = 3 }
- enum TPVMediaType_t { PV_MEDIA_NONE = 0, PV_CONTROL = 1, PV_AUDIO = 2, PV_VIDEO = 4, PV_DATA = 8, PV_USER_INPUT = 16, PV_MULTIPLEXED = 32, PV_MEDIA_ALL = 0xFFFF }
- enum PV2WayState { EIdle = 0, EInitializing, ESetup, EConnecting, EConnected, EDisconnecting, EResetting }

- enum **TPVTIndicationType** { **PVT_INDICATION_INCOMING_TRACK**, **PVT_INDICATION_OUTGOING_TRACK**, **PVT_INDICATION_DISCONNECT**, **PVT_INDICATION_CLOSING_TRACK**, **PVT_INDICATION_CLOSE_TRACK**, **PVT_INDICATION_PAUSE_TRACK**, **PVT_INDICATION_RESUME_TRACK**, **PVT_INDICATION_INTERNAL_ERROR** }

Variables

- const int **PV2WayErrorStatusStart** = (-10500)
- const int **PV2WayDispatchError** = **PV2WayErrorStatusStart** - 1
- const int **PV2WayDisconnectError** = **PV2WayErrorStatusStart** - 2
- const int **PV2WayErrorRejected** = **PV2WayErrorStatusStart** - 5
- const int **PV2WayErrReplaced** = **PV2WayErrorStatusStart** - 6

5.1.1 Typedef Documentation

5.1.1.1 **typedef enum TPVDirection PV2WayDirection**

TPVDirection Enum

TPVDirection enumerates the direction of the track.

5.1.1.2 **typedef enum TPVLoopbackMode PV2WayLoopbackMode**

TPVLoopbackMode Enum

TPVLoopbackMode enumerates the possible loopback options that can be used with the pv2way SDK

5.1.1.3 **typedef enum TPVMediaType_t PV2WayMediaType**

Enumeration of high level media types supported by the SDK

5.1.1.4 **typedef enum TPVTerminalType PV2WayTerminalType**

TPVTerminalType enum TPVTerminalType enumerates the possible 2-way protocols

5.1.1.5 **typedef unsigned int PVTrackId**

PVTrackId uniquely identifies a track for transferring audio/video in a particular direction - receive or transmit.

5.1.2 Enumeration Type Documentation

5.1.2.1 **enum PV2WayState**

TPV2WayState Class

An enumeration of the major states of the pv2way engine.

Enumeration values:

EIdle The state immediately after the pv2way instance has been successfully created or instantiated. No resources have been allocated yet.

EInitializing The pv2way is in this state when it is initializing from the EIdle to the ESetup state. The terminal queries the available device capabilities (encode, decode, mux), acquires resources to make a two-way call (codecs, formats, memory etc) and transitions to the ESetup state when it will be ready to accept setup parameters and Connect. If initializing fails, the pv2way relinquishes the resources and reverts to the EIdle state.

ESetup The state where the pv2way instance is in the process of receiving setup parameters from the application, for encoding, multiplexing, capturing and rendering. Each time a new set of parameters is passed in, validation will take place and a status will be returned accordingly. A valid data source and data sink for the communications port are to be added to the terminal in this state before it can be transitioned to the EConnecting state. Media sources and sinks can also be added at this time.

EConnecting The state where the pv2way instance has received a call to start connecting. It starts communication with the remote terminal to exchange media capabilities and channel configuration in preparation for the establishment of media channels.

EConnected The state after all control signaling is completed. The terminal is now able to open media tracks for audio and video.

EDisconnecting The state where the terminal is shutting down all tracks and the multiplex.

EResetting The state where the terminal is releasing all resources and transitioning to the EIdle state.

5.1.2.2 enum TPVDirection

TPVDirection Enum

TPVDirection enumerates the direction of the track.

Enumeration values:

PV_DIRECTION_NONE

INCOMING

OUTGOING

PV_DIRECTION_BOTH

5.1.2.3 enum TPVLoopbackMode

TPVLoopbackMode Enum

TPVLoopbackMode enumerates the possible loopback options that can be used with the pv2way SDK

Enumeration values:

PV_LOOPBACK_NONE

PV_LOOPBACK_COMM

PV_LOOPBACK_ENGINE

PV_LOOPBACK_MUX

5.1.2.4 enum TPVMediaType_t

Enumeration of high level media types supported by the SDK

Enumeration values:

PV_MEDIA_NONE
PV_CONTROL
PV_AUDIO
PV_VIDEO
PV_DATA
PV_USER_INPUT
PV_MUXED
PV_MEDIA_ALL

5.1.2.5 enum TPVTerminalType

TPVTerminalType enum TPVTerminalType enumerates the possible 2-way protocols

Enumeration values:

PV_323
PV_324M
PV_SIP
PV_TERMINAL_TYPE_NONE

5.1.2.6 enum TPVTIndicationType

TPVTIndicationType enum

Enumeration of unsolicited indications from pv2way.

Enumeration values:

PVT_INDICATION_INCOMING_TRACK Indicates that the peer terminal has established an incoming track. The local buffer specifies the media type associated with the track. The first octet of the local buffer indicates the media type. The second,third and fourth octets are reserved. The four octets from five to eight are to be interpreted as a unique track id. The format type and additional capabilities are indicated using the PV2WayTrackInfoInterface extension interface.

PVT_INDICATION_OUTGOING_TRACK Indicates that the local terminal has established an outgoing track that is acceptable to the peer. The local buffer specifies the media type associated with the track. The first octet of the local buffer indicates the media type. The second,third and fourth octets are reserved. The four octets from five to eight are to be interpreted as a unique track id. The format type and additional capabilities are indicated using the PV2WayTrackInfoInterface extension interface.

PVT_INDICATION_DISCONNECT Indicates that 2way engine has ended the current telephony session. The app can now either reset the engine or make a subsequent call.

PVT_INDICATION_CLOSING_TRACK Indicates the start of unsolicited closure of an incoming/outgoing track. The PVT_INDICATION_CLOSE_TRACK indication will be sent when the track is completely close. The first octet of the local buffer indicates the direction of the track. The second and third octets indicates the track id.

PVT_INDICATION_CLOSE_TRACK Indicates an unsolicited closure of an incoming/outgoing track. Any media sink/source associated with this will be stopped and returned to the application. The first octet of the local buffer indicates the media type of the track. The second octet indicates the direction. The third octet indicates whether there is a replacement for this track available. If true, the application may add data source/sink for this track again.

PVT_INDICATION_PAUSE_TRACK Indicates that local terminal has paused an incoming track. Any media sink associated with this will be stopped. The first octet of the local buffer indicates the direction of the track. The second and third octets indicates the track id.

PVT_INDICATION_RESUME_TRACK Indicates that local terminal has resumed an incoming track. Any media sink associated with this will be restarted. The first octet of the local buffer indicates the direction of the track. The second and third octets indicates the track id.

PVT_INDICATION_INTERNAL_ERROR Indicates an internal error in the pv2way engine. The derived class provides further information about the actual error.

5.1.3 Variable Documentation

5.1.3.1 const int PV2WayDisconnectError = **PV2WayErrorStatusStart - 2**

The peer disconnected without endsession command *

5.1.3.2 const int PV2WayDispatchError = **PV2WayErrorStatusStart - 1**

There was an error dispatching muxed data to the downstream node *

5.1.3.3 const int PV2WayErrorRejected = **PV2WayErrorStatusStart - 5**

The request was rejected by the peer *

5.1.3.4 const int PV2WayErrorStatusStart = **(-10500)**

The starting error code for 2way specific errors *

5.1.3.5 const int PV2WayErrReplaced = **PV2WayErrorStatusStart - 6**

Signals replacement of an existing resource *

5.2 pv_2way_engine_factory.h File Reference

```
#include "pv_2way_basic_types.h"
```

Data Structures

- class [CPV2WayEngineFactory](#)

5.3 pv_2way_h324m_types.h File Reference

```
#include "pv_2way_basic_types.h"
#include "pv_uuid.h"
#include "pv_interface.h"
#include "pvt_common.h"
```

Data Structures

- class [CPVLogicalChannelIndication](#)
- class [CPVUserInput](#)
- class [CPVUserInputAlphanumeric](#)
- class [CPVUserInputDtmf](#)
- class [CPVVideoSpatialTemporalTradeoff](#)
- class [PV2Way324ConnectOptions](#)
- class [PV2Way324InitInfo](#)
- class [PVH223A1Config](#)
- class [PVH223A2Config](#)
- class [PVH223A3Config](#)
- class [PVH223A1Config](#)

Defines

- #define [PV_2WAY_MAX_USER_INPUT_FORMATS](#) 4
- #define [PV_2WAY_MAX_SKEW_MS](#) 1000

Typedefs

- typedef enum [TPVPostDisconnectOption](#) [PV2WayPostDisconnectOption](#)
- typedef enum [UserInputType](#) [PV2WayUserInputType](#)

Enumerations

- enum [TPVPostDisconnectOption](#) { [EDisconnectLine](#), [EAnalogueTelephony](#) }
- enum [UserInputType](#) { [PV_ALPHANUMERIC](#) = 0, [PV_DTMF](#) }

5.3.1 Define Documentation

5.3.1.1 #define PV_2WAY_MAX_SKEW_MS 1000

The maximum skew that can be taken into account for both outgoing and incoming sides *

5.3.1.2 #define PV_2WAY_MAX_USER_INPUT_FORMATS 4

The maximum number of supported formats for user input *

5.3.2 Typedef Documentation

5.3.2.1 **typedef enum TPVPostDisconnectOption PV2WayPostDisconnectOption**

TPVPostDisconnectOption Enum

TPVPostDisconnectOption enumerates the mode the peer wants to transition to after the disconnect

5.3.2.2 **typedef enum UserInputType PV2WayUserInputType**

UserInputType enum Enumeration of user input types

5.3.3 Enumeration Type Documentation

5.3.3.1 **enum TPVPostDisconnectOption**

TPVPostDisconnectOption Enum

TPVPostDisconnectOption enumerates the mode the peer wants to transition to after the disconnect

Enumeration values:

EDisconnectLine

EAnalogueTelephony

5.3.3.2 **enum UserInputType**

UserInputType enum Enumeration of user input types

Enumeration values:

PV_ALPHANUMERIC

PV_DTMF

5.4 pv_2way_interface.h File Reference

```
#include "pv_common_types.h"
#include "oscl_vector.h"
#include "pvt_common.h"
#include "pvmf_node_interface.h"
#include "pvlogger_accessories.h"
#include "pv_engine_types.h"
#include "pv_2way_basic_types.h"
#include "pv_2way_h324m_types.h"
```

Data Structures

- class [CPV2WayInterface](#)

5.5 pv_2way_proxy_factory.h File Reference

```
#include "pv_common_types.h"
#include "pv_2way_interface.h"
#include "pv_engine_observer.h"
```

Data Structures

- class [CPV2WayProxyFactory](#)

5.6 pv_2way_test_extension_interface.h File Reference

```
#include "oscl_base.h"
#include "oscl_string.h"
#include "oscl_refcounter_memfrag.h"
#include "pv_uuid.h"
#include "pv_interface.h"
```

Data Structures

- class [PV2WayTestExtensionInterface](#)

Defines

- #define [PV2WayTestEncExtensionUUID](#) PVUuid(0x19b53654, 0x2dd4,0x4469,0xa9,0xdb,0x86,0x28,0xa7,0x69,0x92,0xe3)

5.6.1 Define Documentation

**5.6.1.1 #define PV2WayTestEncExtensionUUID PVUuid(0x19b53654,
0x2dd4,0x4469,0xa9,0xdb,0x86,0x28,0xa7,0x69,0x92,0xe3)**

5.7 tsc_h324m_config_interface.h File Reference

```
#include "oscl_base.h"
#include "pvt_common.h"
#include "pv_uuid.h"
#include "pvmf_node_interface.h"
#include "pv_2way_h324m_types.h"
```

Data Structures

- class [H324MConfigInterface](#)
- class [H324MConfigObserver](#)
- class [H324MReverseParametersExtensionInterface](#)
- class [PVMFComponentInterface](#)

Defines

- #define [PVH324MConfigUuid](#) PVUuid(0x2b0b54e2,0x7079,0x46c6,0xb2,0x3e,0x04,0xff,0xd3,0x0e,0x14,0x36)
- #define [PVUuidH324ComponentInterface](#) PVUuid(0xf6b47190,0xf88d,0x4cbf,0xa6,0xf6,0xc6,0x1e,0xfe,0x98,0x05,0x3f)

Typedefs

- typedef uint32 [H324MConfigInformationalEvent](#)
- typedef uint32 [H324MConfigStatusResponse](#)

Enumerations

```
• enum PVH324MIndicationType { PV_INDICATION_VIDEO_SPATIAL_TEMPORAL_TRADEOFF_COMMAND, PV_INDICATION_VIDEO_SPATIAL_TEMPORAL_TRADEOFF_INDICATION, PV_INDICATION_FAST_UPDATE, PV_INDICATION_RTD, PV_INDICATION_RME, PV_INDICATION_VENDOR_ID, PV_INDICATION_USER_INPUT_CAPABILITY, PV_INDICATION_USER_INPUT, PV_INDICATION_SKEW, PV_INDICATION_LOGICAL_CHANNEL_ACTIVE, PV_INDICATION_LOGICAL_CHANNEL_INACTIVE }
```

5.7.1 Define Documentation

- 5.7.1.1 `#define PVH324MConfigUuid PVU-
uid(0x2b0b54e2,0x7079,0x46c6,0xb2,0x3e,0x04,0xff,0xd3,0x0e,0x14,0x36)`
- 5.7.1.2 `#define PVUuidH324ComponentInterface PVU-
uid(0xf6b47190,0xf88d,0x4cbf,0xa6,0xf6,0xc6,0x1e,0xfe,0x98,0x05,0x3f)`

5.7.2 Typedef Documentation

- 5.7.2.1 `typedef uint32 H324MConfigInformationalEvent`
- 5.7.2.2 `typedef uint32 H324MConfigStatusResponse`

5.7.3 Enumeration Type Documentation

- 5.7.3.1 `enum PVH324MIndicationType`

PVH324MIndicationType enum

Enumeration of unsolicited H324m specific indications from pv2way.

Enumeration values:

PV_INDICATION_VIDEO_SPATIAL_TEMPORAL_TRADEOFF_COMMAND Indicates the receipt of a videoSpatialTemporalTradeoff command from the peer. The first 2 bytes of the event local buffer indicate the logical channel (network byte order) and the 3rd byte indicates the tradeoff value.

PV_INDICATION_VIDEO_SPATIAL_TEMPORAL_TRADEOFF_INDICATION Indicates the receipt of a videoSpatialTemporalTradeoff indication from the peer. The first 2 bytes of the event local buffer indicate the logical channel (network byte order) and the 3rd byte indicates the tradeoff value.

PV_INDICATION_FAST_UPDATE Indicates a fast update message from the remote terminal. The first two bytes of the local buffer encode the logical channel number in network byte order.

PV_INDICATION_RTD Indicates an incoming RTD command.

PV_INDICATION_RME Indicates an incoming request multiplex entry command.

PV_INDICATION_VENDOR_ID Indicates an incoming vendor id indication message.

PV_INDICATION_USER_INPUT_CAPABILITY Indicates the receipt of user input capability from the remote terminal. The first byte in local buffer contains the user input formats supported by the peer. The least significant stands for basicString, 2nd bit defines support for iA5String, 3rd for generalString and 4th dtmf.

PV_INDICATION_USER_INPUT Indicates the receipt of user input from the remote terminal. Event extension interface contains pointer to [CPVUserInput](#) that holds the actual user input sequences received.

PV_INDICATION_SKEW Indicates the receipt of a h223SkewIndication indication from the peer. The first 2 bytes of the event local buffer indicate the first logical channel, the 3rd and 4th bytes the second logical channel and the 5th and 6th bytes the value of the skew in milliseconds. All values are in network byte order.

PV_INDICATION_LOGICAL_CHANNEL_ACTIVE Indicates a Active Logical Channel message from the remote terminal. The first two bytes of the local buffer encode the logical channel number in network byte order.

PV_INDICATION_LOGICAL_CHANNEL_INACTIVE Indicates a Inactive Logical Channel message from the remote terminal. The first two bytes of the local buffer encode the logical channel number in network byte order.

Index

~CPV2WayInterface
 CPV2WayInterface, 7

~CPVLogicalChannelIndication
 CPVLogicalChannelIndication, 15

~CPVUserInput
 CPVUserInput, 16

~CPVUserInputAlphanumeric
 CPVUserInputAlphanumeric, 17

~CPVUserInputDtmf
 CPVUserInputDtmf, 19

~CPVVideoSpatialTemporalTradeoff
 CPVVideoSpatialTemporalTradeoff, 21

~H324MConfigObserver
 H324MConfigObserver, 32

~PV2Way324ConnectOptions
 PV2Way324ConnectOptions, 35

~PV2Way324InitInfo
 PV2Way324InitInfo, 36

~PV2WayConnectOptions
 PV2WayConnectOptions, 39

~PV2WayInitInfo
 PV2WayInitInfo, 40

~PVH223AIConfig
 PVH223AIConfig, 47

AddDataSink
 CPV2WayInterface, 7

AddDataSource
 CPV2WayInterface, 7

addRef
 CPVLogicalChannelIndication, 15
 CPVUserInput, 16
 CPVVideoSpatialTemporalTradeoff, 21
 PV2WayTestExtensionInterface, 42
 PVMFComponentInterface, 48

CancelAllCommands
 CPV2WayInterface, 7

Cleanup
 CPV2WayEngineFactory, 4
 CPV2WayProxyFactory, 14

Connect
 CPV2WayInterface, 8

CPV2WayEngineFactory, 4

CPV2WayEngineFactory

Cleanup, 4

CreateTerminal, 4

DeleteTerminal, 4

Init, 5

CPV2WayInterface, 6

CPV2WayInterface
 ~CPV2WayInterface, 7

AddDataSink, 7

AddDataSource, 7

CancelAllCommands, 7

Connect, 8

Disconnect, 8

GetLogLevel, 8

GetSDKInfo, 9

GetSDKModuleInfo, 9

GetState, 9

Init, 10

Pause, 10

QueryInterface, 10

RemoveDataSink, 11

RemoveDataSource, 11

RemoveLogAppender, 11

Reset, 12

Resume, 12

SetLogAppender, 12

SetLogLevel, 13

CPV2WayProxyFactory, 14

CPV2WayProxyFactory
 Cleanup, 14

CreateTerminal, 14

DeleteTerminal, 14

Init, 14

CPVLogicalChannelIndication, 15

 CPVLogicalChannelIndication, 15

CPVLogicalChannelIndication
 ~CPVLogicalChannelIndication, 15

addRef, 15

CPVLogicalChannelIndication, 15

GetChannelId, 15

removeRef, 15

CPVUserInput, 16

 CPVUserInput, 16

CPVUserInput
 ~CPVUserInput, 16

addRef, 16

CPVUserInput, 16
 GetType, 16
 removeRef, 16
 CPVUserInputAlphanumeric, 17
 CPVUserInputAlphanumeric, 17
 CPVUserInputAlphanumeric
 ~CPVUserInputAlphanumeric, 17
 CPVUserInputAlphanumeric, 17
 GetInput, 18
 GetLength, 18
 GetType, 18
 iLength, 18
 ipInput, 18
 CPVUserInputDtmf, 19
 CPVUserInputDtmf, 19
 CPVUserInputDtmf
 ~CPVUserInputDtmf, 19
 CPVUserInputDtmf, 19
 GetDuration, 20
 GetInput, 20
 GetType, 20
 IsUpdate, 20
 CPVVideoSpatialTemporalTradeoff, 21
 CPVVideoSpatialTemporalTradeoff, 21
 CPVVideoSpatialTemporalTradeoff
 ~CPVVideoSpatialTemporalTradeoff, 21
 addRef, 21
 CPVVideoSpatialTemporalTradeoff, 21
 GetChannelId, 21
 GetTradeoff, 21
 removeRef, 21
 CreateTerminal
 CPV2WayEngineFactory, 4
 CPV2WayProxyFactory, 14

 DeleteTerminal
 CPV2WayEngineFactory, 4
 CPV2WayProxyFactory, 14

 Disconnect
 CPV2WayInterface, 8

 EAnalogueTelephony
 pv_2way_h324m_types.h, 56

 EConnected
 pv_2way_basic_types.h, 51

 EConnecting
 pv_2way_basic_types.h, 51

 EDDisconnecting
 pv_2way_basic_types.h, 51

 EDDisconnectLine
 pv_2way_h324m_types.h, 56

 EIdle
 pv_2way_basic_types.h, 51

 EInitializing

 pv_2way_basic_types.h, 51
 EResetting
 pv_2way_basic_types.h, 51
 ESetup
 pv_2way_basic_types.h, 51

 FastUpdate
 H324MConfigInterface, 23

 GetChannelId
 CPVLogicalChannelIndication, 15
 CPVVideoSpatialTemporalTradeoff, 21

 GetConnectInfoClassName
 PV2Way324ConnectOptions, 35
 PV2WayConnectOptions, 39

 GetDuration
 CPVUserInputDtmf, 20

 GetFormatCapabilities
 H324MReverseParametersExtension-
 Interface, 33

 GetInitInfoClassName
 PV2Way324InitInfo, 36
 PV2WayInitInfo, 40

 GetInput
 CPVUserInputAlphanumeric, 18
 CPVUserInputDtmf, 20

 GetLength
 CPVUserInputAlphanumeric, 18

 GetLogLevel
 CPV2WayInterface, 8

 GetPortTag
 H324MReverseParametersExtension-
 Interface, 33

 GetSDKInfo
 CPV2WayInterface, 9

 GetSDKModuleInfo
 CPV2WayInterface, 9

 GetState
 CPV2WayInterface, 9

 GetTradeoff
 CPVVideoSpatialTemporalTradeoff, 21

 GetType
 CPVUserInput, 16
 CPVUserInputAlphanumeric, 18
 CPVUserInputDtmf, 20

 H324MConfigCommandCompletedL
 H324MConfigObserver, 32

 H324MConfigHandleInformationalEventL
 H324MConfigObserver, 32

 H324MConfigInformationalEvent
 tsc_h324m_config_interface.h, 61

 H324MConfigInterface, 22

 H324MConfigInterface

FastUpdate, 23
 SendEndSession, 23
 SendLogicalChannelActiveIndication, 23
 SendLogicalChannelInactiveIndication, 23
 SendRme, 24
 SendRtd, 24
 SendSkewIndication, 24
 SendUserInput, 24
 SendVendorId, 25
 SendVideoTemporalSpatialTradeoffCommand, 25
 SendVideoTemporalSpatialTradeoffIndication, 25
 SetAI2SequenceNumbers, 25
 SetAI3ControlFieldOctets, 25
 SetALConfiguration, 26
 SetCodecPreference, 26
 SetEndSessionTimeout, 26
 SetFormatSpecificInfo, 27
 SetLogicalChannelBufferingMs, 27
 SetMaxMuxCcsrlSduSize, 27
 SetMaxMuxPduSize, 27
 SetMaxPduSize, 28
 SetMaxSduSize, 28
 SetMaxSduSizeR, 28
 SetMultiplexLevel, 29
 SetObserver, 29
 SetTerminalType, 29
 SetTimerCounter, 29
 SetVendor, 30
 SetVideoResolutions, 30
 SetWnsrp, 30
 H324MConfigObserver, 32
 H324MConfigObserver
 ~H324MConfigObserver, 32
 H324MConfigCommandCompletedL, 32
 H324MConfigHandleInformationalEventL, 32
 H324MConfigStatusResponse
 tsc_h324m_config_interface.h, 61
 H324MReverseParametersExtensionInterface, 33
 H324MReverseParametersExtensionInterface
 GetFormatCapabilities, 33
 GetPortTag, 33
 SetPortTag, 33
 iControlFieldOctets
 PVH223AI3Config, 46
 iDisconnectTimeoutInterval
 PV2Way324ConnectOptions, 35
 iFramed
 PVH223AI1Config, 44
 iIncomingAudioFormats
 PV2WayInitInfo, 40
 iIncomingVideoFormats
 PV2WayInitInfo, 40
 iLength
 CPVUserInputAlphanumeric, 18
 iLocalId
 PV2WayConnectOptions, 39
 iLocalIdSize
 PV2WayConnectOptions, 39
 iLoopbackMode
 PV2WayConnectOptions, 39
 iMultiplexingDelayMs
 PV2Way324InitInfo, 37
 INCOMING
 pv_2way_basic_types.h, 51
 Init
 CPV2WayEngineFactory, 5
 CPV2WayInterface, 10
 CPV2WayProxyFactory, 14
 iOutgoingAudioFormats
 PV2WayInitInfo, 41
 iOutgoingVideoFormats
 PV2WayInitInfo, 41
 ipInput
 CPVUserInputAlphanumeric, 18
 iReferenceCount
 PVMFComponentInterface, 48
 iRemoteId
 PV2WayConnectOptions, 39
 iRemoteIdSize
 PV2WayConnectOptions, 39
 IsA
 PVH223AI1Config, 44
 PVH223AI2Config, 45
 PVH223AI3Config, 46
 PVH223AIConfig, 47
 iSendBufferSize
 PVH223AI3Config, 46
 IsUpdate
 CPVUserInputDtmf, 20
 iUseSequenceNumbers
 PVH223AI2Config, 45
 NegotiatedFormatsMatch
 PV2WayTestExtensionInterface, 42
 OUTGOING
 pv_2way_basic_types.h, 51
 Pause
 CPV2WayInterface, 10
 PV2Way324ConnectOptions, 34
 PV2Way324ConnectOptions, 34
 PV2Way324ConnectOptions

~PV2Way324ConnectOptions, 35
 GetConnectInfoClassName, 35
 iDisconnectTimeInterval, 35
 PV2Way324ConnectOptions, 34
PV2Way324InitInfo, 36
 PV2Way324InitInfo, 36
PV2Way324InitInfo
 ~PV2Way324InitInfo, 36
 GetInitInfoClassName, 36
 iMultiplexingDelayMs, 37
 PV2Way324InitInfo, 36
PV2WayConnectOptions, 38
 PV2WayConnectOptions, 38
PV2WayConnectOptions
 ~PV2WayConnectOptions, 39
 GetConnectInfoClassName, 39
 iLocalId, 39
 iLocalIdSize, 39
 iLoopbackMode, 39
 iRemoteId, 39
 iRemoteIdSize, 39
 PV2WayConnectOptions, 38
PV2WayDirection
 pv_2way_basic_types.h, 50
PV2WayDisconnectError
 pv_2way_basic_types.h, 53
PV2WayDispatchError
 pv_2way_basic_types.h, 53
PV2WayErrorRejected
 pv_2way_basic_types.h, 53
PV2WayErrorStatusStart
 pv_2way_basic_types.h, 53
PV2WayErrReplaced
 pv_2way_basic_types.h, 53
PV2WayInitInfo, 40
PV2WayInitInfo
 ~PV2WayInitInfo, 40
 GetInitInfoClassName, 40
 iIncomingAudioFormats, 40
 iIncomingVideoFormats, 40
 iOutgoingAudioFormats, 41
 iOutgoingVideoFormats, 41
PV2WayLoopbackMode
 pv_2way_basic_types.h, 50
PV2WayMediaType
 pv_2way_basic_types.h, 50
PV2WayPostDisconnectOption
 pv_2way_h324m_types.h, 56
PV2WayState
 pv_2way_basic_types.h, 50
PV2WayTerminalType
 pv_2way_basic_types.h, 50
PV2WayTestEncExtensionUUID
 pv_2way_test_extension_interface.h, 59

PV2WayTestExtensionInterface, 42
PV2WayTestExtensionInterface
 addRef, 42
 NegotiatedFormatsMatch, 42
 queryInterface, 42
 removeRef, 42
 UsingExternalAudioDecBuffers, 42
 UsingExternalVideoDecBuffers, 43
PV2WayUserInputType
 pv_2way_h324m_types.h, 56
 pv_2way_basic_types.h
 EConnected, 51
 EConnecting, 51
 EDisconnecting, 51
 EIdle, 51
 EInitializing, 51
 EResetting, 51
 ESetup, 51
 INCOMING, 51
 OUTGOING, 51
 PV_323, 52
 PV_324M, 52
 PV_AUDIO, 52
 PV_CONTROL, 52
 PV_DATA, 52
 PV_DIRECTION_BOTH, 51
 PV_DIRECTION_NONE, 51
 PV_LOOPBACK_COMM, 51
 PV_LOOPBACK_ENGINE, 51
 PV_LOOPBACK_MUX, 51
 PV_LOOPBACK_NONE, 51
 PV_MEDIA_ALL, 52
 PV_MEDIA_NONE, 52
 PV_MULTIPLEXED, 52
 PV_SIP, 52
 PV_TERMINAL_TYPE_NONE, 52
 PV_USER_INPUT, 52
 PV_VIDEO, 52
 PVT_INDICATION_CLOSE_TRACK, 52
 PVT_INDICATION_CLOSING_TRACK,
 52
 PVT_INDICATION_DISCONNECT, 52
 PVT_INDICATION_INCOMING_-
 TRACK, 52
 PVT_INDICATION_INTERNAL_-
 ERROR, 53
 PVT_INDICATION_OUTGOING_-
 TRACK, 52
 PVT_INDICATION_PAUSE_TRACK, 53
 PVT_INDICATION_RESUME_TRACK,
 53
 pv_2way_basic_types.h, 49
 PV2WayDirection, 50
 PV2WayDisconnectError, 53

PV2WayDispatchError, 53
 PV2WayErrorRejected, 53
 PV2WayErrorStatusStart, 53
 PV2WayErrReplaced, 53
 PV2WayLoopbackMode, 50
 PV2WayMediaType, 50
 PV2WayState, 50
 PV2WayTerminalType, 50
 PVTrackId, 50
 TPVDirection, 51
 TPVLoopbackMode, 51
 TPVMediaType_t, 51
 TPVTerminalType, 52
 TPVTIndicationType, 52
 pv_2way_engine_factory.h, 54
 pv_2way_h324m_types.h
 EAnalogueTelephony, 56
 EDisconnectLine, 56
 PV_ALPHANUMERIC, 56
 PV_DTMF, 56
 pv_2way_h324m_types.h, 55
 PV2WayPostDisconnectOption, 56
 PV2WayUserInputType, 56
 PV_2WAY_MAX_SKEW_MS, 55
 PV_2WAY_MAX_USER_INPUT_FORMATS, 55
 TPVPostDisconnectOption, 56
 UserInputType, 56
 pv_2way_interface.h, 57
 PV_2WAY_MAX_SKEW_MS
 pv_2way_h324m_types.h, 55
 PV_2WAY_MAX_USER_INPUT_FORMATS
 pv_2way_h324m_types.h, 55
 pv_2way_proxy_factory.h, 58
 pv_2way_test_extension_interface.h, 59
 PV2WayTestEncExtensionUUID, 59
 PV_323
 pv_2way_basic_types.h, 52
 PV_324M
 pv_2way_basic_types.h, 52
 PV_ALPHANUMERIC
 pv_2way_h324m_types.h, 56
 PV_AUDIO
 pv_2way_basic_types.h, 52
 PV_CONTROL
 pv_2way_basic_types.h, 52
 PV_DATA
 pv_2way_basic_types.h, 52
 PV_DIRECTION_BOTH
 pv_2way_basic_types.h, 51
 PV_DIRECTION_NONE
 pv_2way_basic_types.h, 51
 PV_DTMF
 pv_2way_h324m_types.h, 56
 PV_INDICATION_FAST_UPDATE
 tsc_h324m_config_interface.h, 61
 PV_INDICATION_LOGICAL_CHANNEL_ACTIVE
 tsc_h324m_config_interface.h, 61
 PV_INDICATION_LOGICAL_CHANNEL_INACTIVE
 tsc_h324m_config_interface.h, 61
 PV_INDICATION_RME
 tsc_h324m_config_interface.h, 61
 PV_INDICATION_RTID
 tsc_h324m_config_interface.h, 61
 PV_INDICATION_SKEW
 tsc_h324m_config_interface.h, 61
 PV_INDICATION_USER_INPUT
 tsc_h324m_config_interface.h, 61
 PV_INDICATION_USER_INPUT_CAPABILITY
 tsc_h324m_config_interface.h, 61
 PV_INDICATION_VENDOR_ID
 tsc_h324m_config_interface.h, 61
 PV_INDICATION_VIDEO_SPATIAL_TEMPORAL_TRADEOFF_COMMAND
 tsc_h324m_config_interface.h, 61
 PV_INDICATION_VIDEO_SPATIAL_TEMPORAL_TRADEOFF_INDICATION
 tsc_h324m_config_interface.h, 61
 PV_LOOPBACK_COMM
 pv_2way_basic_types.h, 51
 PV_LOOPBACK_ENGINE
 pv_2way_basic_types.h, 51
 PV_LOOPBACK_MUX
 pv_2way_basic_types.h, 51
 PV_LOOPBACK_NONE
 pv_2way_basic_types.h, 51
 PV_MEDIA_ALL
 pv_2way_basic_types.h, 52
 PV_MEDIA_NONE
 pv_2way_basic_types.h, 52
 PV_MULTIPLEXED
 pv_2way_basic_types.h, 52
 PV_SIP
 pv_2way_basic_types.h, 52
 PV_TERMINAL_TYPE_NONE
 pv_2way_basic_types.h, 52
 PV_USER_INPUT
 pv_2way_basic_types.h, 52
 PV_VIDEO
 pv_2way_basic_types.h, 52
 PVH223_AL1
 PVH223AlConfig, 47
 PVH223_AL2

PVH223AlConfig, 47
PVH223_AL3
 PVH223AlConfig, 47
PVH223Al1Config, 44
 iFramed, 44
 IsA, 44
PVH223Al2Config, 45
 IsA, 45
 iUseSequenceNumbers, 45
PVH223Al3Config, 46
 iControlFieldOctets, 46
 IsA, 46
 iSendBufferSize, 46
PVH223AlConfig, 47
 PVH223_AL1, 47
 PVH223_AL2, 47
 PVH223_AL3, 47
PVH223AlConfig
 ~**PVH223AlConfig**, 47
 IsA, 47
 PVH223AlIndex, 47
PVH223AlIndex
 PVH223AlConfig, 47
PVH324MConfigUuid
 tsc_h324m_config_interface.h, 61
PVH324MIndicationType
 tsc_h324m_config_interface.h, 61
PVMFComponentInterface, 48
 PVMFComponentInterface, 48
PVMFComponentInterface
 addRef, 48
 iReferenceCount, 48
 PVMFComponentInterface, 48
 removeRef, 48
PVT_INDICATION_CLOSE_TRACK
 pv_2way_basic_types.h, 52
PVT_INDICATION_CLOSING_TRACK
 pv_2way_basic_types.h, 52
PVT_INDICATION_DISCONNECT
 pv_2way_basic_types.h, 52
PVT_INDICATION_INCOMING_TRACK
 pv_2way_basic_types.h, 52
PVT_INDICATION_INTERNAL_ERROR
 pv_2way_basic_types.h, 53
PVT_INDICATION_OUTGOING_TRACK
 pv_2way_basic_types.h, 52
PVT_INDICATION_PAUSE_TRACK
 pv_2way_basic_types.h, 53
PVT_INDICATION_RESUME_TRACK
 pv_2way_basic_types.h, 53
PVTrackId
 pv_2way_basic_types.h, 50
PVUuidH324ComponentInterface
 tsc_h324m_config_interface.h, 61

QueryInterface
 CPV2WayInterface, 10
queryInterface
 PV2WayTestExtensionInterface, 42

RemoveDataSink
 CPV2WayInterface, 11
RemoveDataSource
 CPV2WayInterface, 11
RemoveLogAppender
 CPV2WayInterface, 11
removeRef
 CPVLogicalChannelIndication, 15
 CPVUserInput, 16
 CPVVideoSpatialTemporalTradeoff, 21
 PV2WayTestExtensionInterface, 42
 PVMFComponentInterface, 48

Reset
 CPV2WayInterface, 12

Resume
 CPV2WayInterface, 12

SendEndSession
 H324MConfigInterface, 23

SendLogicalChannelActiveIndication
 H324MConfigInterface, 23

SendLogicalChannelInactiveIndication
 H324MConfigInterface, 23

SendRme
 H324MConfigInterface, 24

SendRtd
 H324MConfigInterface, 24

SendSkewIndication
 H324MConfigInterface, 24

SendUserInput
 H324MConfigInterface, 24

SendVendorId
 H324MConfigInterface, 25

SendVideoTemporalSpatialTradeoffCommand
 H324MConfigInterface, 25

SendVideoTemporalSpatialTradeoffIndication
 H324MConfigInterface, 25

SetAl2SequenceNumbers
 H324MConfigInterface, 25

SetAl3ControlFieldOctets
 H324MConfigInterface, 25

SetALConfiguration
 H324MConfigInterface, 26

SetCodecPreference
 H324MConfigInterface, 26

SetEndSessionTimeout
 H324MConfigInterface, 26

SetFormatSpecificInfo
 H324MConfigInterface, 27

SetLogAppender
 CPV2WayInterface, 12
 SetLogicalChannelBufferingMs
 H324MConfigInterface, 27
 SetLogLevel
 CPV2WayInterface, 13
 SetMaxMuxCcsrlSduSize
 H324MConfigInterface, 27
 SetMaxMuxPduSize
 H324MConfigInterface, 27
 SetMaxPduSize
 H324MConfigInterface, 28
 SetMaxSduSize
 H324MConfigInterface, 28
 SetMaxSduSizeR
 H324MConfigInterface, 28
 SetMultiplexLevel
 H324MConfigInterface, 29
 SetObserver
 H324MConfigInterface, 29
 SetPortTag
 H324MReverseParametersExtension-
 Interface, 33
 SetTerminalType
 H324MConfigInterface, 29
 SetTimerCounter
 H324MConfigInterface, 29
 SetVendor
 H324MConfigInterface, 30
 SetVideoResolutions
 H324MConfigInterface, 30
 SetWnsrp
 H324MConfigInterface, 30

TPVDirection
 pv_2way_basic_types.h, 51
 TPVLoopbackMode
 pv_2way_basic_types.h, 51
 TPVMediaType_t
 pv_2way_basic_types.h, 51
 TPVPostDisconnectOption
 pv_2way_h324m_types.h, 56
 TPVTerminalType
 pv_2way_basic_types.h, 52
 TPVTIndicationType
 pv_2way_basic_types.h, 52
 tsc_h324m_config_interface.h
 PV_INDICATION_FAST_UPDATE, 61
 PV_INDICATION_LOGICAL_-
 CHANNEL_ACTIVE, 61
 PV_INDICATION_LOGICAL_-
 CHANNEL_INACTIVE, 61
 PV_INDICATION_RME, 61
 PV_INDICATION_RTID, 61

PV_INDICATION_SKEW, 61
 PV_INDICATION_USER_INPUT, 61
 PV_INDICATION_USER_INPUT_-
 CAPABILITY, 61
 PV_INDICATION_VENDOR_ID, 61
 PV_INDICATION_VIDEO_SPATIAL_-
 TEMPORAL_TRADEOFF_-
 COMMAND, 61
 PV_INDICATION_VIDEO_SPATIAL_-
 TEMPORAL_TRADEOFF_-
 INDICATION, 61
 tsc_h324m_config_interface.h, 60
 H324MConfigInformationalEvent, 61
 H324MConfigStatusResponse, 61
 PVH324MConfigUuid, 61
 PVH324MIndicationType, 61
 PVUuidH324ComponentInterface, 61

UserInputType
 pv_2way_h324m_types.h, 56
 UsingExternalAudioDecBuffers
 PV2WayTestExtensionInterface, 42
 UsingExternalVideoDecBuffers
 PV2WayTestExtensionInterface, 43